



INSTALLATION AND OPERATION
MANUAL FOR HUUM DROP
ELECTRIC SAUNA
HEATER



Table of Contents

1. THINGS TO CHECK BEFORE INSTALLATION..... 2

2. INSTALLATION 2

3. CONTROLLING THE HEATER..... 5

4. GUARD RAILS..... 5

5. SAUNA ROOM 5

The HUUM DROP electric sauna heater delivery set contains:

- electric heater
 - installation and operation manual for the electric heater.
- NB! The electric heater requires a control panel and stones.

1. THINGS TO CHECK BEFORE INSTALLATION

- Does the output (kW) match the volume (m3) of the sauna room? See table 1.
- In case there are any uninsulated brick, tile or glass walls in the sauna room, an additional volume of 15.3 m³ should be added to the sauna room for each such square meter of the wall.
- The suitable output of the heater will be determined based on Table 1.
- The producer’s warranty guarantee is invalid if the heater and sauna room have been dimensioned incorrectly!
- Minimal safe distances between the sauna room’s ceiling and walls in view of installing the electric heater are listed in Table 1.

2. INSTALLATION

2.1 Positioning the heater

- The heater must be positioned in such a way that there is a safe distance between flammable materials and the external surfaces of the heater.
- In installing the heater, it must be prevented that people could have physical contact with the heater or that other dangerous situations could emerge during the heating process.

Table 1 Output Room **A B C D E** Mingapbetween


heater and ceiling

kW m3 mmmmmmmmm mm

DROP4	4.5	3-7	100	590	450	170	310	1,200						
DROP6	6	5-10	120	630	470	220	310	1,250						
DROP9	9	8-15	150	690	500	220	310	1,250						

- The method of mounting the heater must guarantee that it remains securely on the wall. The full weight of 65 kg should be considered upon installing the heater on the wall.



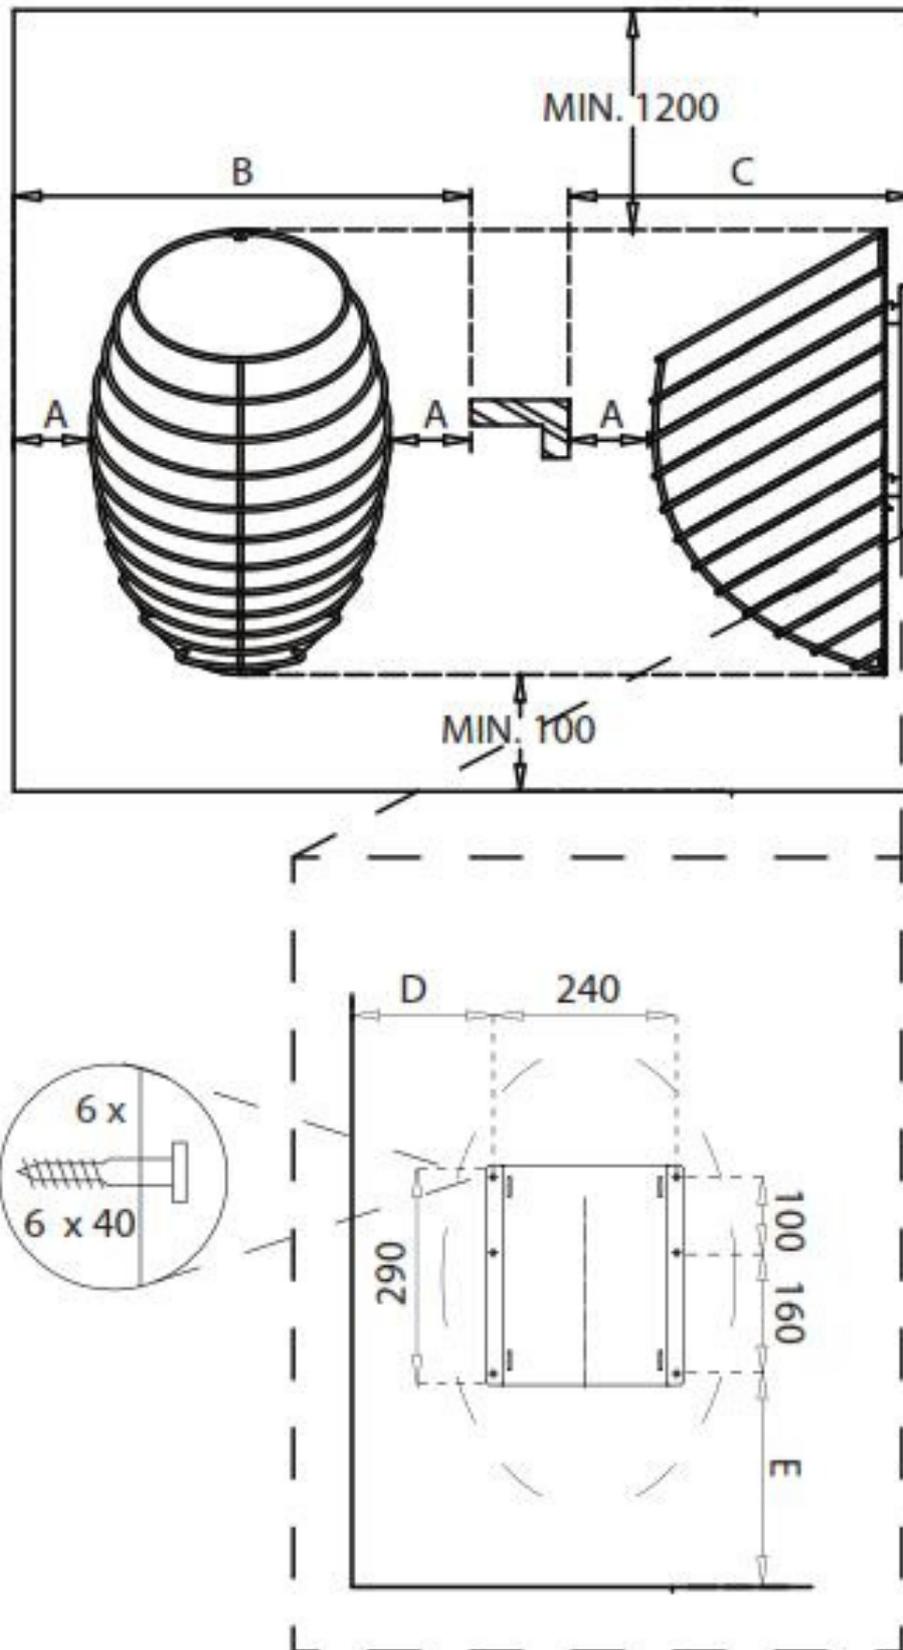

2.2 Connecting the heater to the power supply

- Only a certified electrician is allowed to connect the heater to the power supply.

- A rubber insulated HO7RN-F cable or an equivalent cable must be used as the connection cable.

The maximum current intensity in the cross-sectional area of the cable and circuit breaker are listed in Table 2.

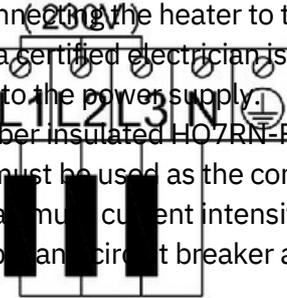


Table 2 Output Heatelements Circuitbreaker Powercable

kW	kW	A	mm ²			
DROP4	4.5	1.5	3x10/1x16	5x1.5/3x2.5		
DROP6	6	2	3x10/1x35	5x1.5/3x6		
DROP9	9	1.5/2	3x16/1x50	5x2.5/3x10		

ATTENTION! It is forbidden to use a non-heat-resistant cable with PVC isolation as the power cable. The joint box must be waterproof and it must be located up to 50 cm from the floor.

- **Open the cover of the heater’s electrical box.**
- **Attach the power cable on the terminal block according to the circuit diagram.**
- **Close the cover.**
- **Fix the cable on the output with a cable strap.**
- **Install the heater on the wall frame.**

2.3 Fitting the stones

Upon stacking the stones, one should monitor that the heating elements are not bent and that there is a sufficient air circulation around the heater elements.

- Stack the stones sparsely between the heating elements. When the stones have been stacked too close to each other, the heating elements may overheat (= shorter useful life) and slow the heating of the sauna.
- Stones with a diameter of 4–7 cm are suitable for the heater.
- The stones on the external surface of the heater must fully cover the heating elements. The heating elements must not be visible.
- The external surface of the stone container must be stacked full as tightly as possible; the surface of the heating elements must not be visible.
- Using ceramic stones in the DROP heater is allowed upon the user’s responsibility.

A TOO SPARSELY FILLED STONE CONTAINER CAUSES FIRE HAZARD!

Before switching the heater on, the insulation resistance might prove to be lower than the standard.

The reason for that is the moisture seeped into the insulating layer during storage in the warehouse and transportation. The moisture evaporates in 1–2 hours of heating the electric heater.

3. CONTROLLING THE HEATER

All certified control panels may be used in controlling the heater.

The output of the heater must remain in the interval determined by the control panel's producer.

4. GUARD RAILS

- It is recommended to construct a guard rail around the heater. We recommend using materials with low heat capacity and bad thermal conductivity for the guard rail.

- Upon using flammable materials, it is necessary to leave the specified minimal safety clearances between the heater and flammable constructions.

INSTALLING THE HEATER CLOSER TO FLAMMABLE CONSTRUCTIONS THAN AT THE DISTANCE OF THE MINIMAL REQUIRED PROTECTION BELT MAY CAUSE FIRE HAZARD.

5. SAUNA ROOM

5.1 Wall materials and insulating the sauna room

In a sauna with electric heating, all massive heat accumulating wall surfaces (brick, glass brick, rendering etc.) must be insulated to use the electric heater with a regular output.

The following sauna wall and ceiling construction is considered to be sufficiently insulated:

- a carefully installed insulation wool layer of 100mm (min. 50mm)
- the construction is damp proofed with taped aluminium paper or other reflective material
- there is a 10mm air gap between the damp protection and boarding
- a light wooden board that is about 12–16mm thick has been used for interior finishing
- there is an air gap of at least 5mm on the edge of the ceiling panels at the upper part of the wall panelling.

In order to use the heater with a regular output, it would be practical to bring the ceiling of the sauna lower (regular 2,100–2,300, min. height of sauna room 1,900 mm) so that the volume of the sauna room diminishes. The ceiling is insulated with an insulation layer at least 100 mm thick and boarded according to the method described above.

Wood should be used to cover internal surfaces; an exception may be made for heat resistant walls in the vicinity of the heater.

ATTENTION! Insulating the heat barrier has to be approved by the fire inspector. Insulating flues in use is forbidden!

ATTENTION! Covering the walls or floor with light protective material, for example, mineral tiles that are installed directly on the surface of the walls or ceiling might cause the dangerous overheating of the wall or ceiling material.

5.2 Darkening of the sauna room walls

Due to heat, the wood material in the sauna room darkens in time. If you use wood protection products, you may notice that the wall above the heater darkens before long. The darkening process is also caused by the fine stone dust, breaking away from the heater stones and lifted up by the airflow. If you follow the producer's instructions upon installing the heater, the

huum@huum.eu

www.huum.eu



flammable materials in the sauna room will not heat to a dangerous level. The highest allowed temperature for the wall and ceiling surfaces is 140 °C.



5.3 Floor of the sauna room

The heater stones in use crumble due to temperature changes. The pieces and pebbles breaking away from the heater stones are washed on the sauna's floor with the steam-making water. Hot stone parts may damage plastic flooring under and near the heater. Heater stone particles and sprays from the steam-making water (e.g., with iron content) may absorb into the light joints of a tile floor. In order to avoid aesthetic damage (caused by the reasons mentioned above), ceramic tiles and dark joint filler should be used under and around the heater.

5.4 Ventilation of the sauna

- In order to assure a sufficient oxygen supply and fresh air, the sauna's ventilation must be as efficient as possible. It is advisable to direct the fresh air into the sauna room from above the heater stones. As an alternative, the fresh air may be directed in from under the heater.
- The air inlet must be equipped with an adjustable valve.
- The exhaust valve must be installed in the opposite wall from the heater at least 20 cm above the inlet valve.

WARNING!

Only one heater may be installed in the sauna room.

- Before returning on the electric heater, always check the sauna room and heater.
- The heater may be used only when it has been correctly filled with stones.
- Do not cover the heater—this causes fire hazard.
- Do not touch a working heater, it causes burns.
 - Ventilating the sauna room incorrectly may dry the wood too much and cause a fire hazard in the sauna.
- Only tap water may be used for making steam.
- Never make steam by using a water hose.
- There must always be at least 5 cm of fireproof heat insulation under the boarding.
- Sauna doors must always open outward.
- Do not use the sauna for any other purpose than it is meant to be used.
- Do not install more than one heater in the sauna room.
- Undiluted sauna essences etc. may ignite when poured directly on the stones.
- Do not leave small children in the sauna unattended.
 - Sudden cooling after staying in the steam room is not recommended for people with poor health. Consult a doctor.
- Enjoy the sauna as long as it is comfortable for you.
- Keep this information in a secure place.
- The product's warranty guaranteed does not extend to heating elements.




Tutorial
Video

DROP

HUUM DROP kuumasuunaja /HUUM DROP heat diverter

Kuumasuunaja kinnitatakse DROP kerise ülemise tagumise serva külge. Selle otstarve on kaitsta kerise taga olevat seina ja lae nurka liigse kuumuse eest.

The heat diverter is attached to the upper rear edge of DROP heater. Its purpose is to protect the wall behind the heater and the corner of the ceiling from excessive heat.

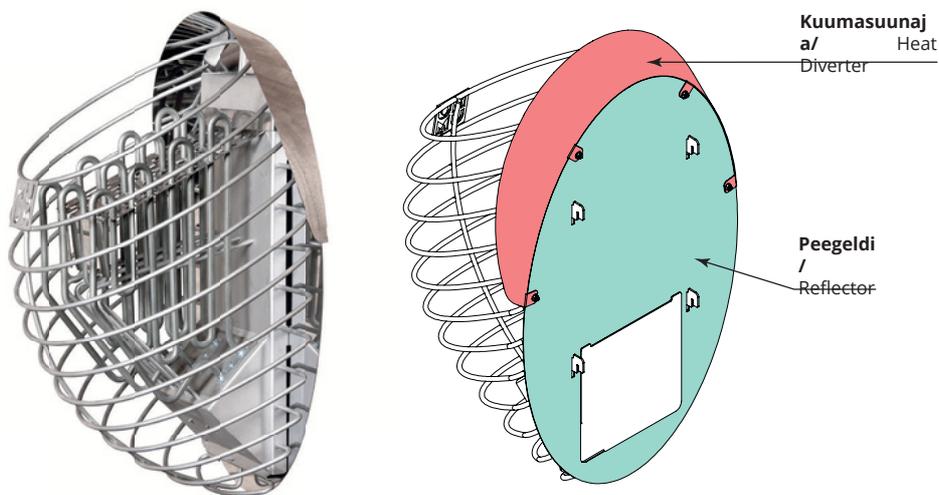

Kuumasuunaja paigaldamine / Installation of the heat diverter

NB! Ole ettevaatlik teravate servadega, vajadusel kasuta kaitsekindaid.

CAUTION! The edges of the components may be sharp. Wearing protective gloves is recommended.

 M4 (x4)

 M4x8 (x4)

- 1 Eemalda peegeldilt kaitsekile.
Eelnevalt kilega kaitstud külg peab jääma kerise poole.


Remove the protective film from the reflector.
The side that was covered must face the heater.

- 2 Eemalda kuumasuunajalt kaitsekile.
Eelnevalt kilega kaitstud külg peab jääma üles.

Remove the protective film from the heat diverter.
The side that was covered must face upwards.


- 3 Kinnita kuumasuunaja ots peegeldi külge.

- 3 Jälgi, et kuumasuunaja kõrvake ja mutter jääksid samale poole peegeldit.
Align the lug at the end of the heat diverter with the reflector, ensuring the lug and nut are on the same side of the reflector. Fasten using a bolt and nut.

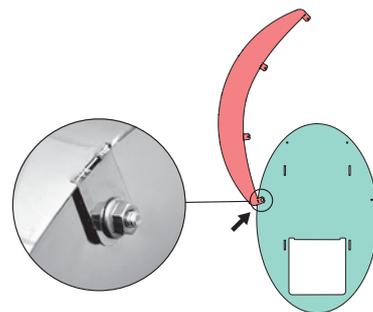


- 4 Painuta kuumasuunaja teises otsas asuvat kõrvakest veidi endast eemale, seejärel painuta kuumasuunajat ning ühenda see poldi ja mutriga peegeldi külge.

Slightly bend the lug at the heat diverter's opposite end away from you. Then, bend the diverter to align with the reflector and secure it with a bolt and nut.

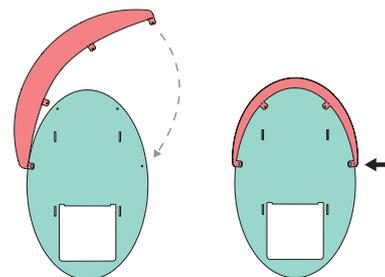

- 5 Painuta kuumasuunaja keskel asuvad kõrvakesed vastu peegeldit ning kinnita poldi ja mutriga.

Bend the lugs in the middle of the heat diverter so they press against the reflector. Fasten these with a bolt and nut.

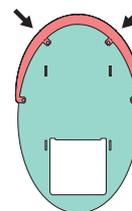

CUK
AK

FSC

CE



Made in Estonia, EU

info@huum.eu
huum.eu
#huumsauna

HUUM OÜ

Vahi tee 9,
Tartumaa
60534, Estonia