



OFFICE 21 insulated

Assembly instruction

**Important !
Wichtig !**

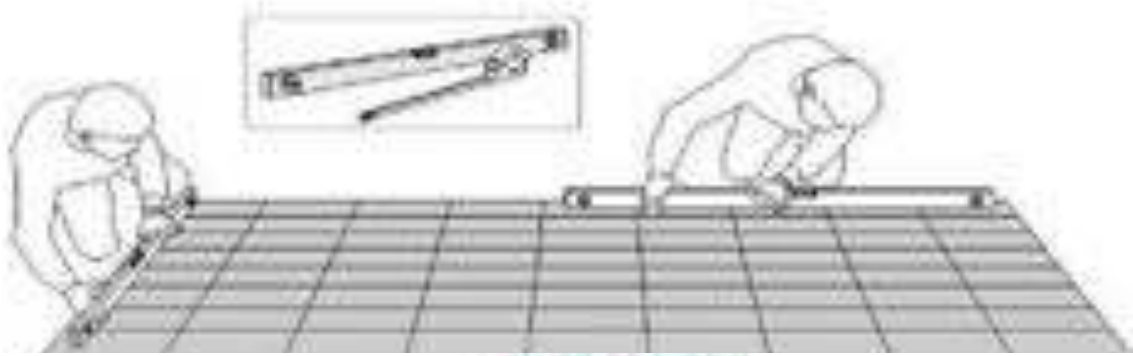


**Important !
Wichtig !**

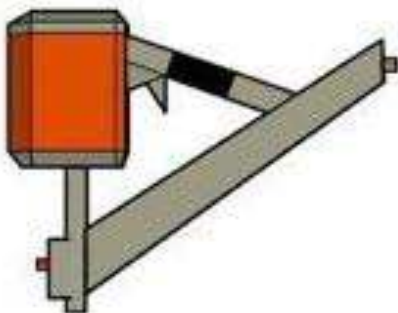


OFFICE 21 insulated Assembly instruction

1/28

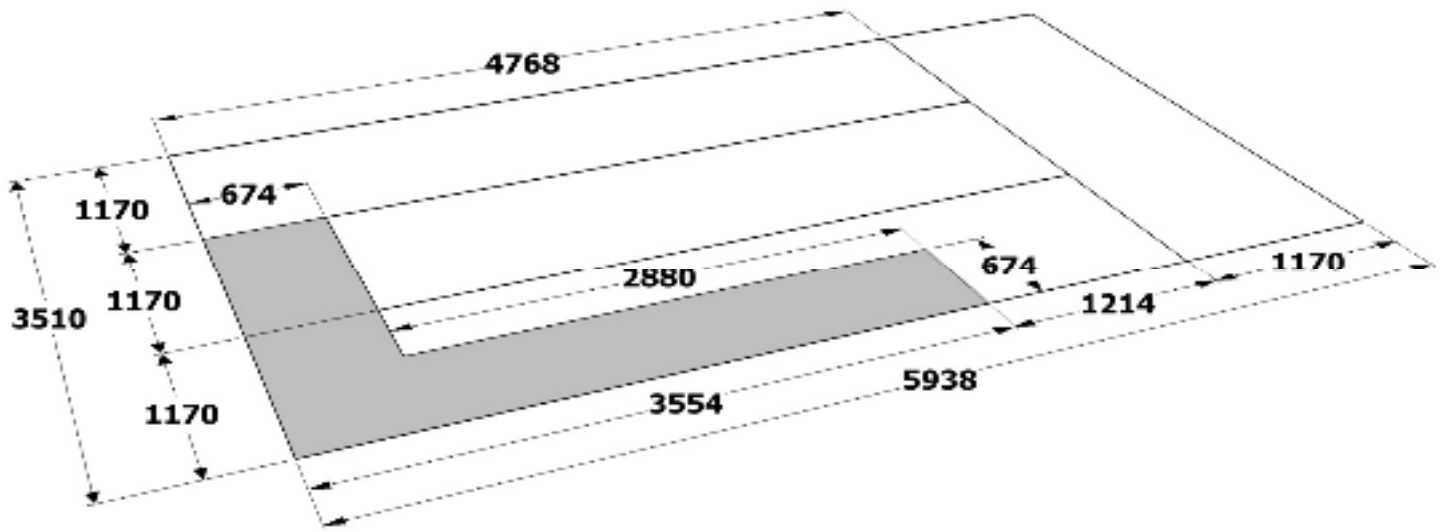


main base dimensions

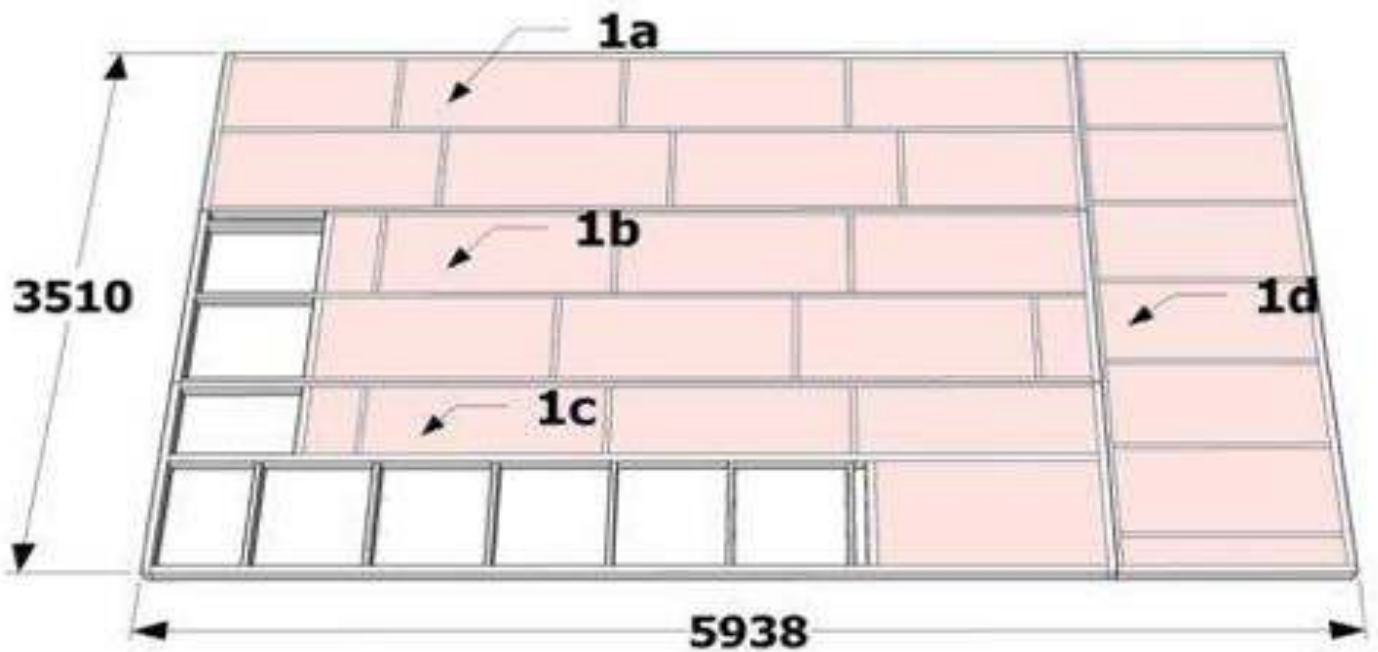


floor elements layout

OFFICE 21 insulated Assembly instruction


2/28

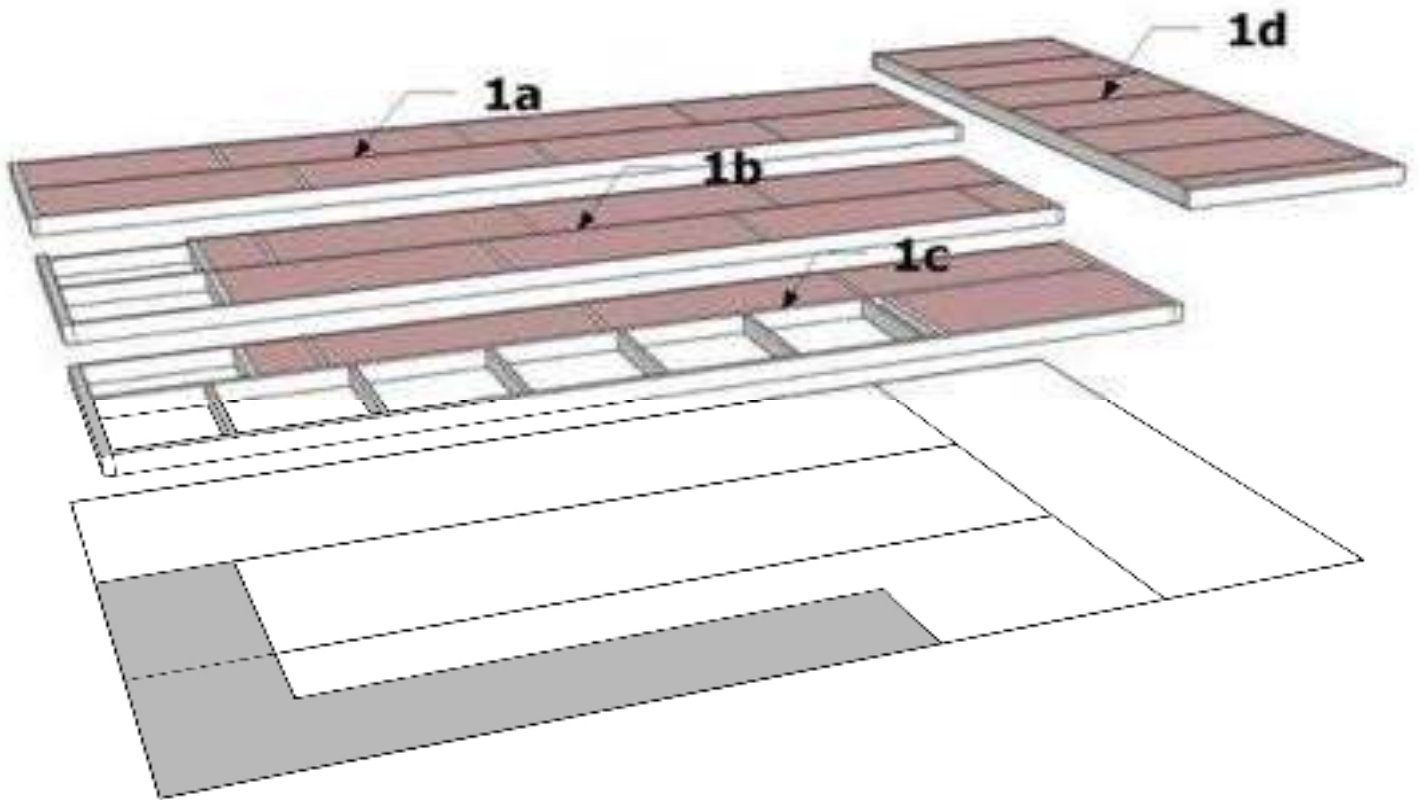

1a + **1b** + **1c** + **1d** **36** **4 x 60**



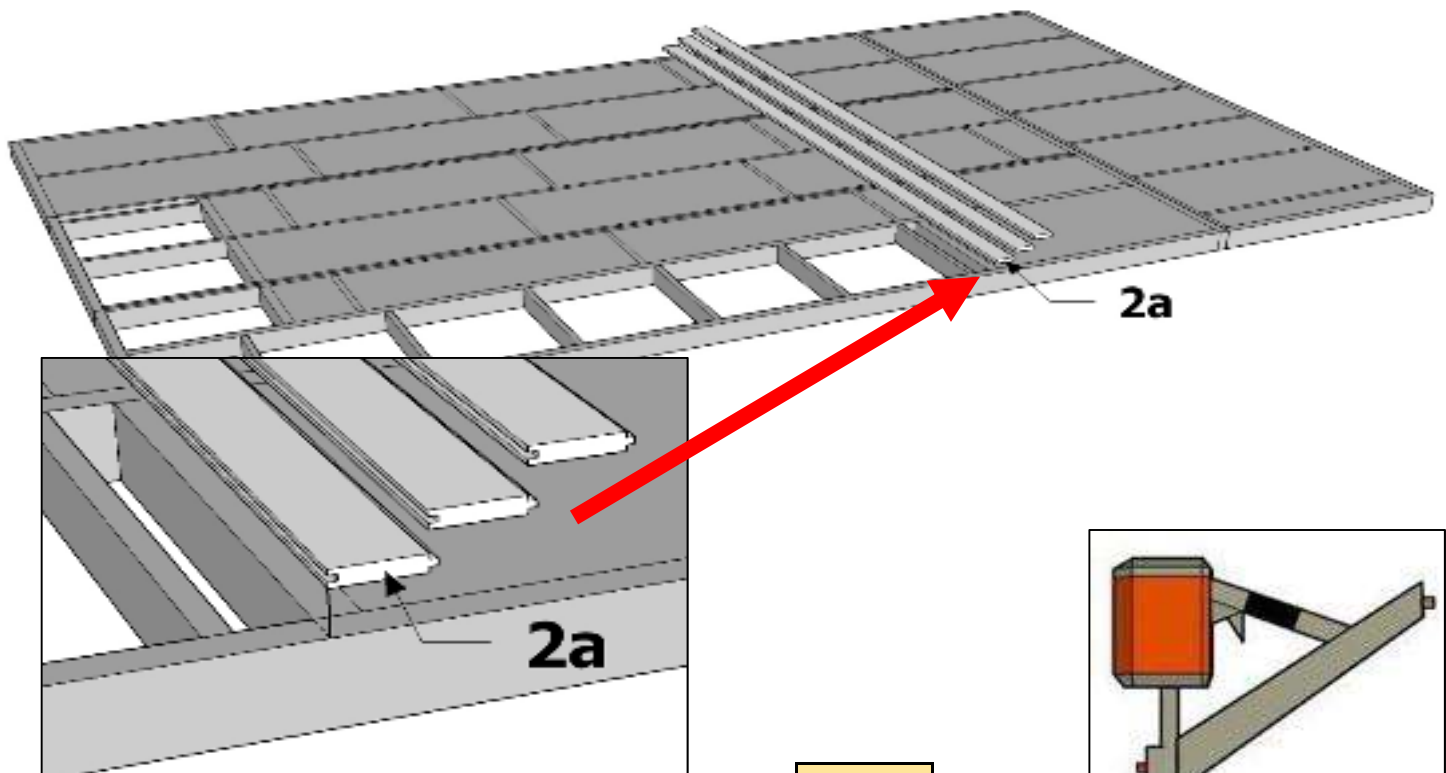


+ **2a**






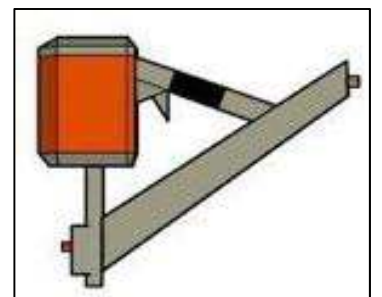


nail gun

OFFICE 21 insulated Assembly instruction

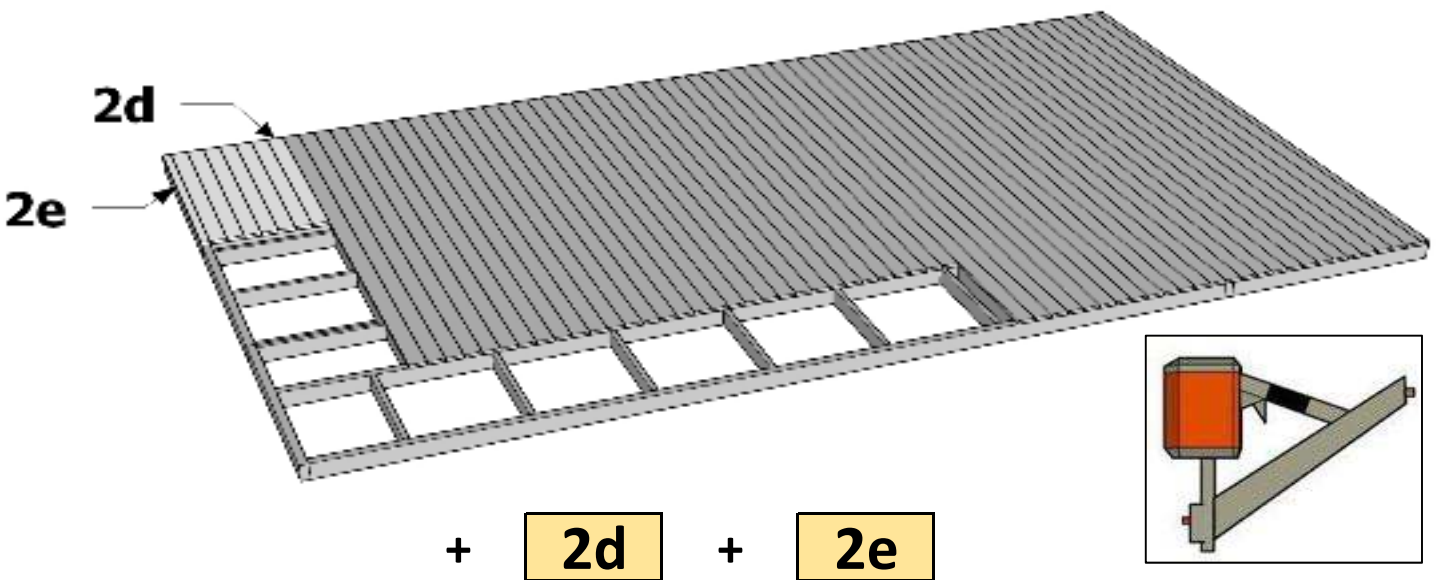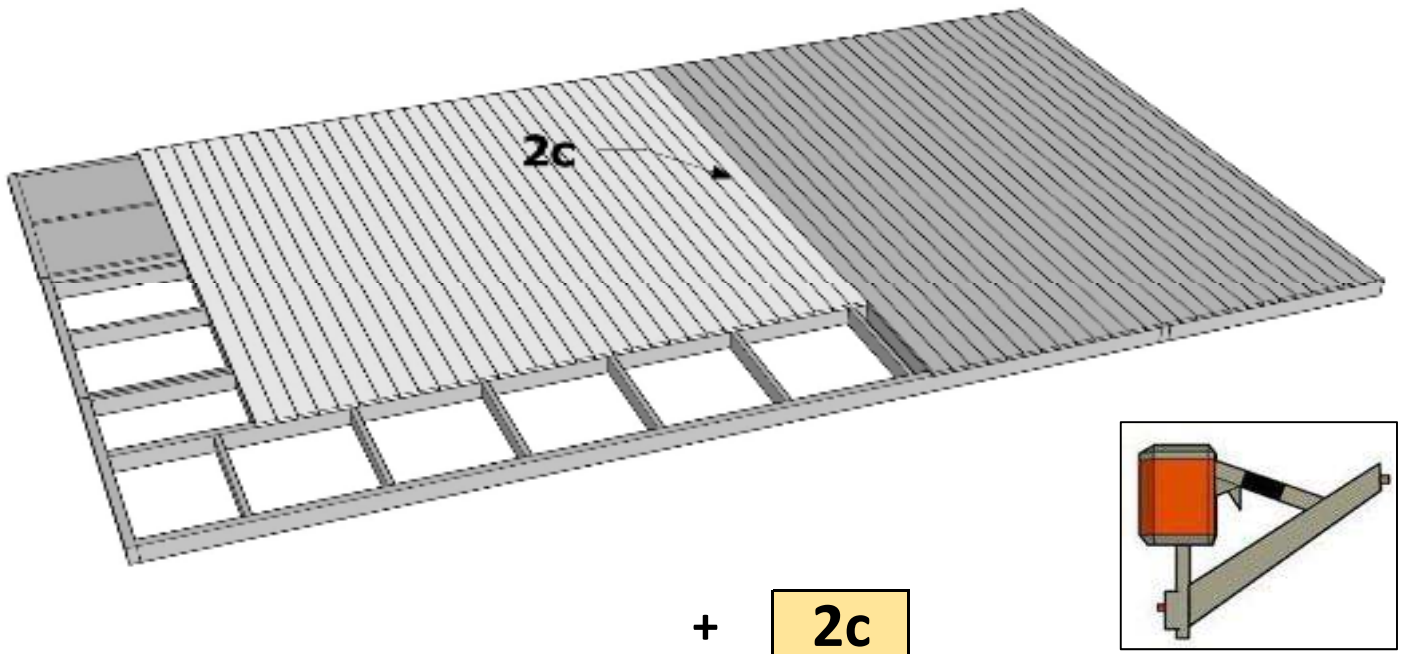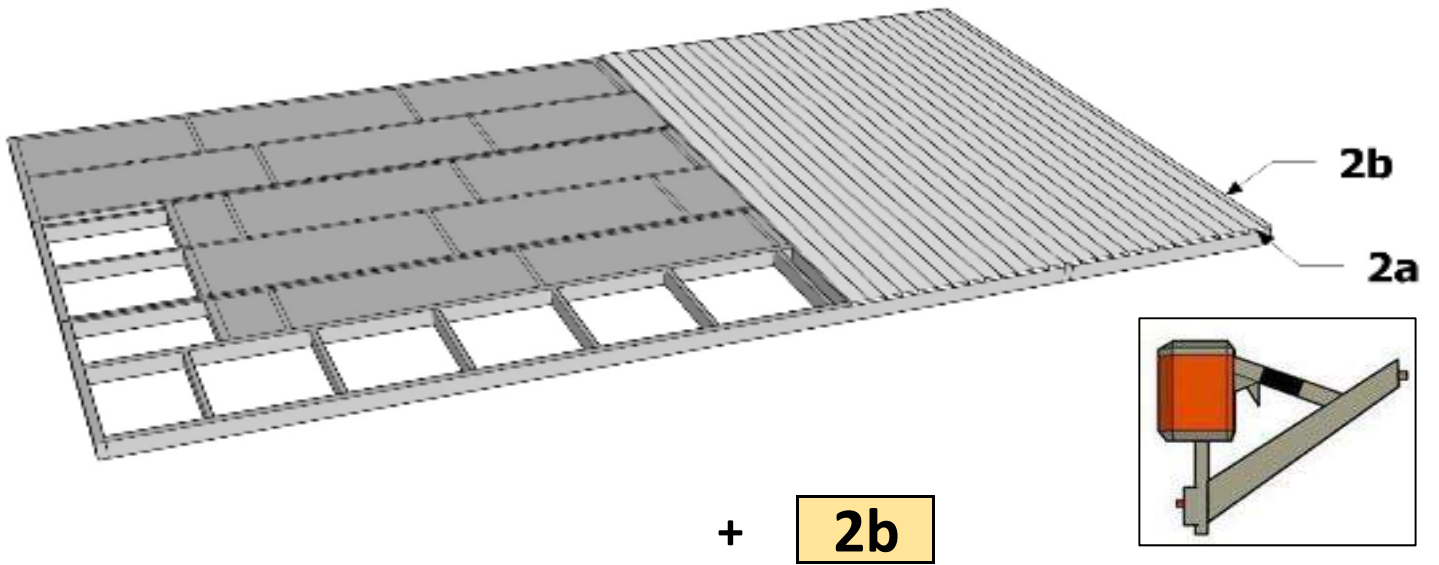

OFFICE 21 insulated Assembly instruction

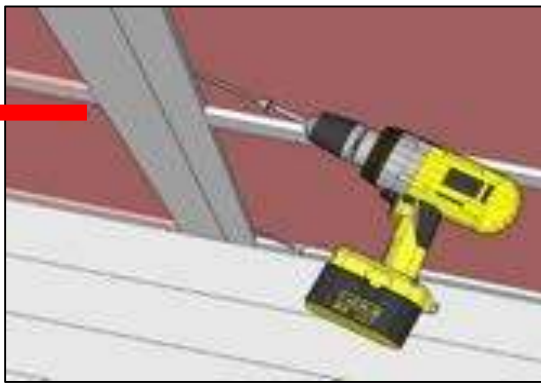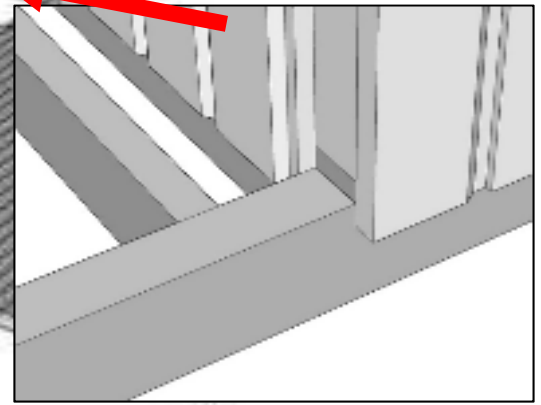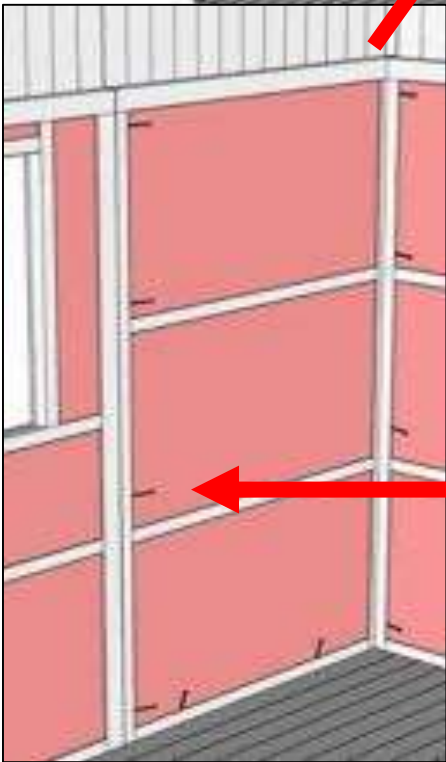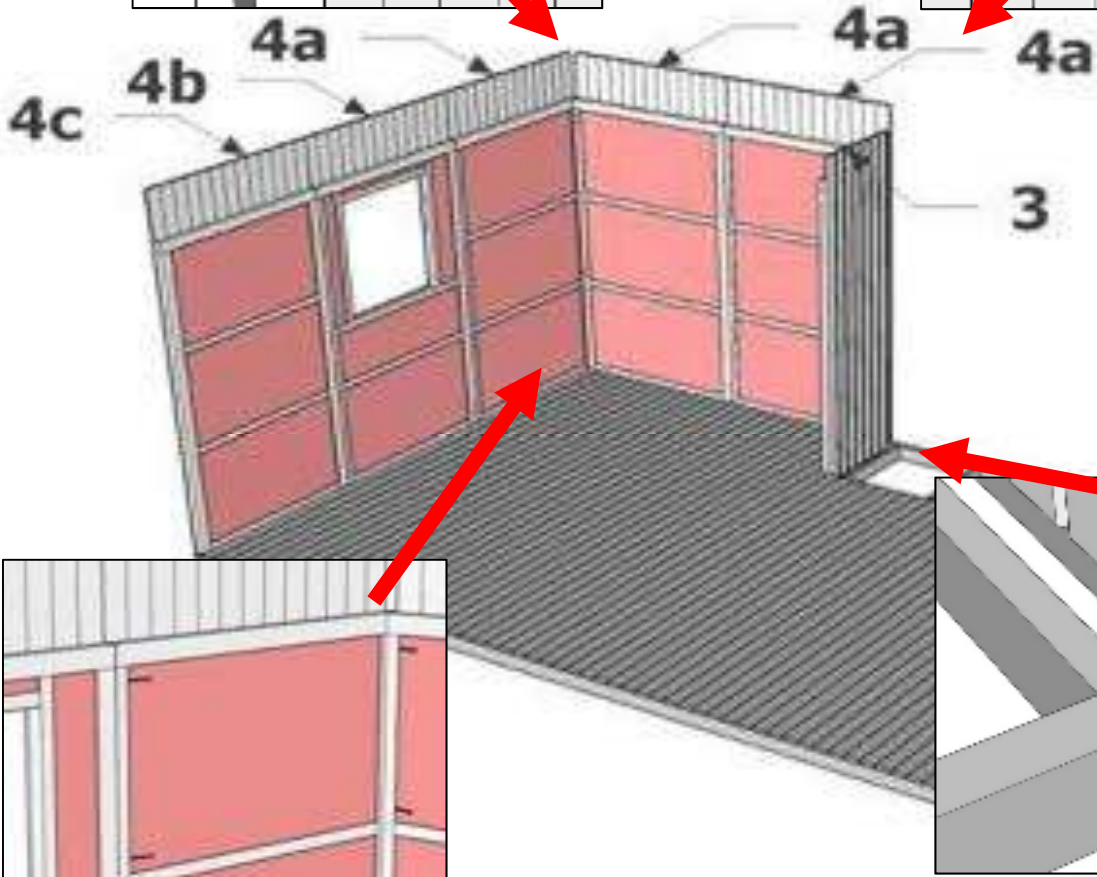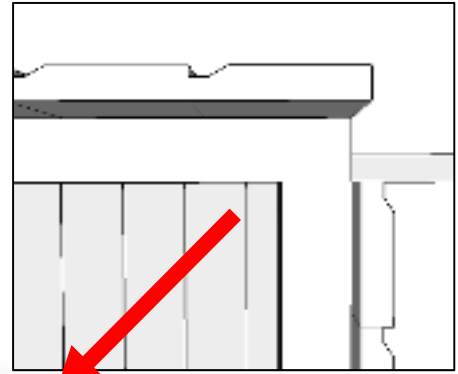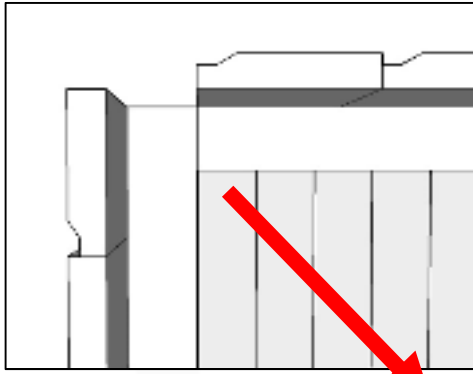


4a + 3 + 4a + 4a 25 4,5 x 80

+ 4b + 4c

4a 3 4a 4a 4b 4c + base 12 4,5 x 80

OFFICE 21 insulated Assembly instruction

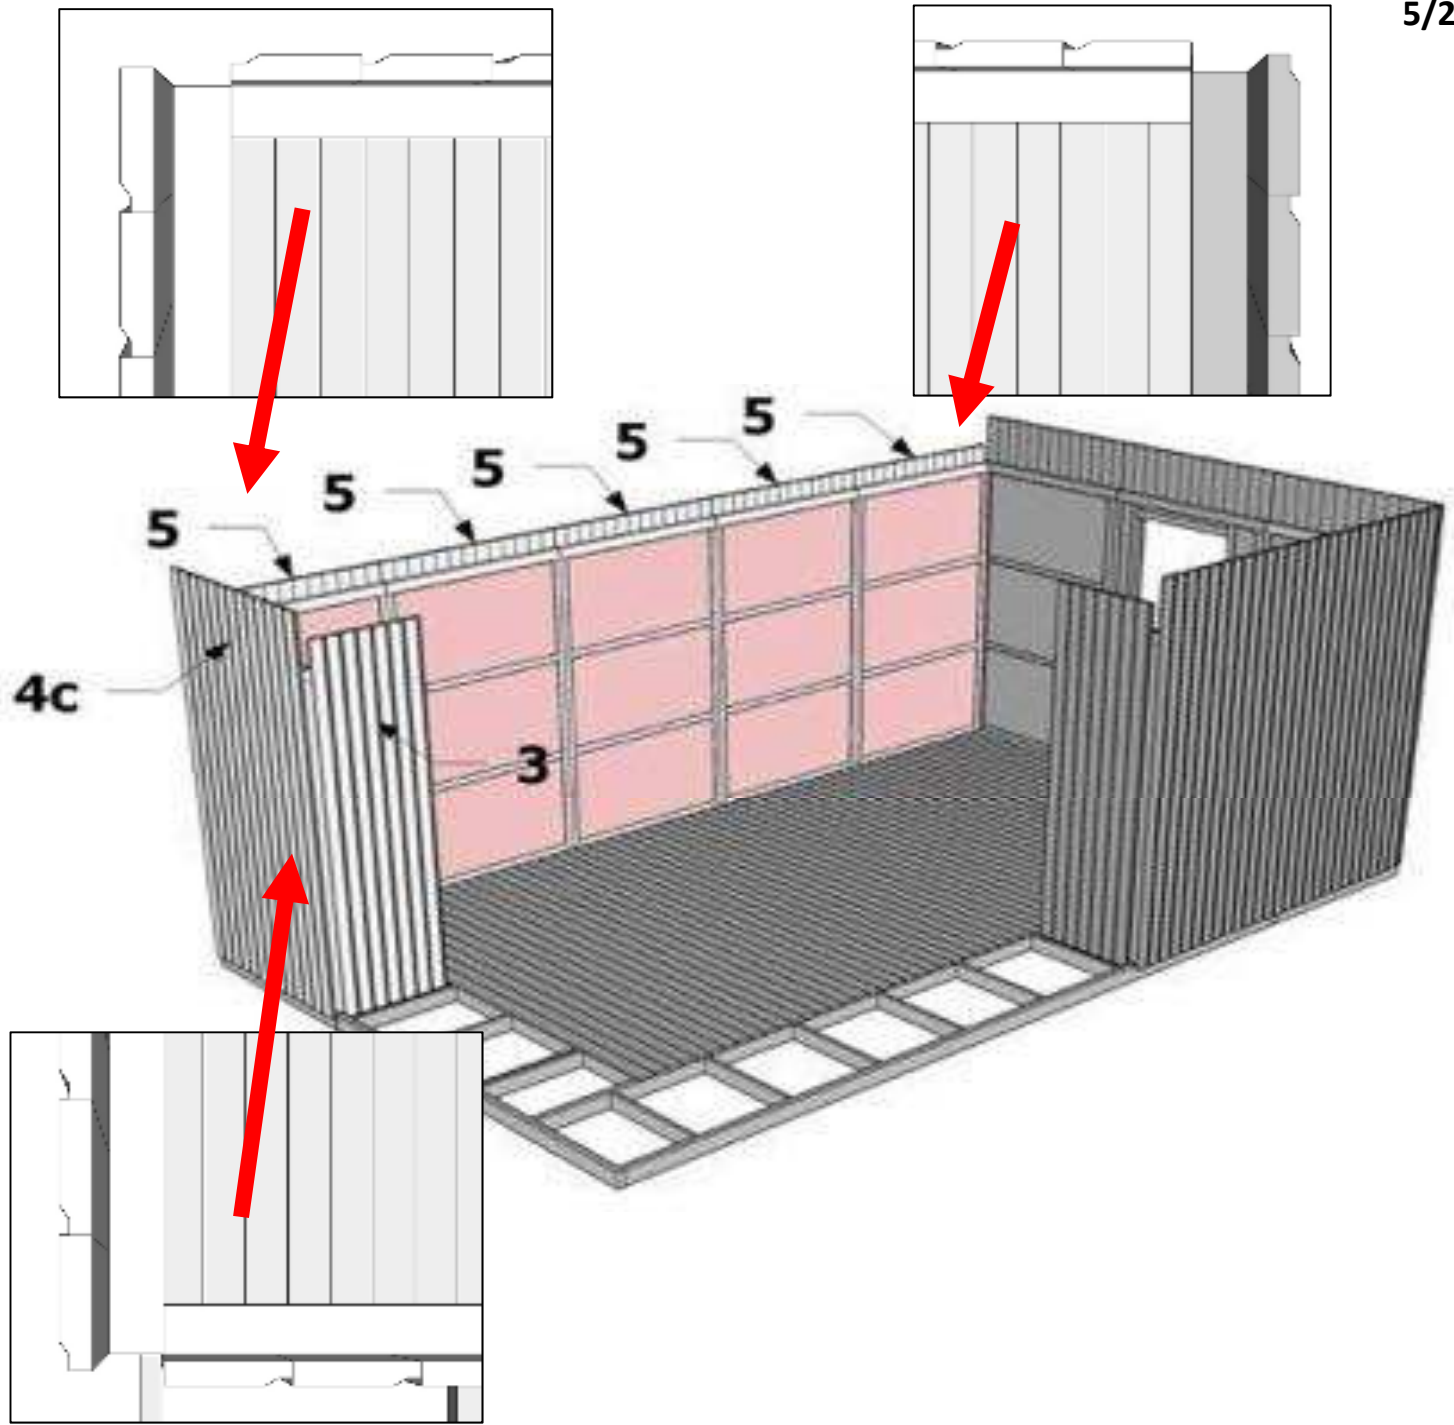


5	+	5	+	5	+	5
	+	5	+	4c	+	3
5	5	5	5	5	4c	3
					+	base

35	4,5 x 80
----	----------

14	4,5 x 80
----	----------


OFFICE 21 insulated Assembly instruction

6/28

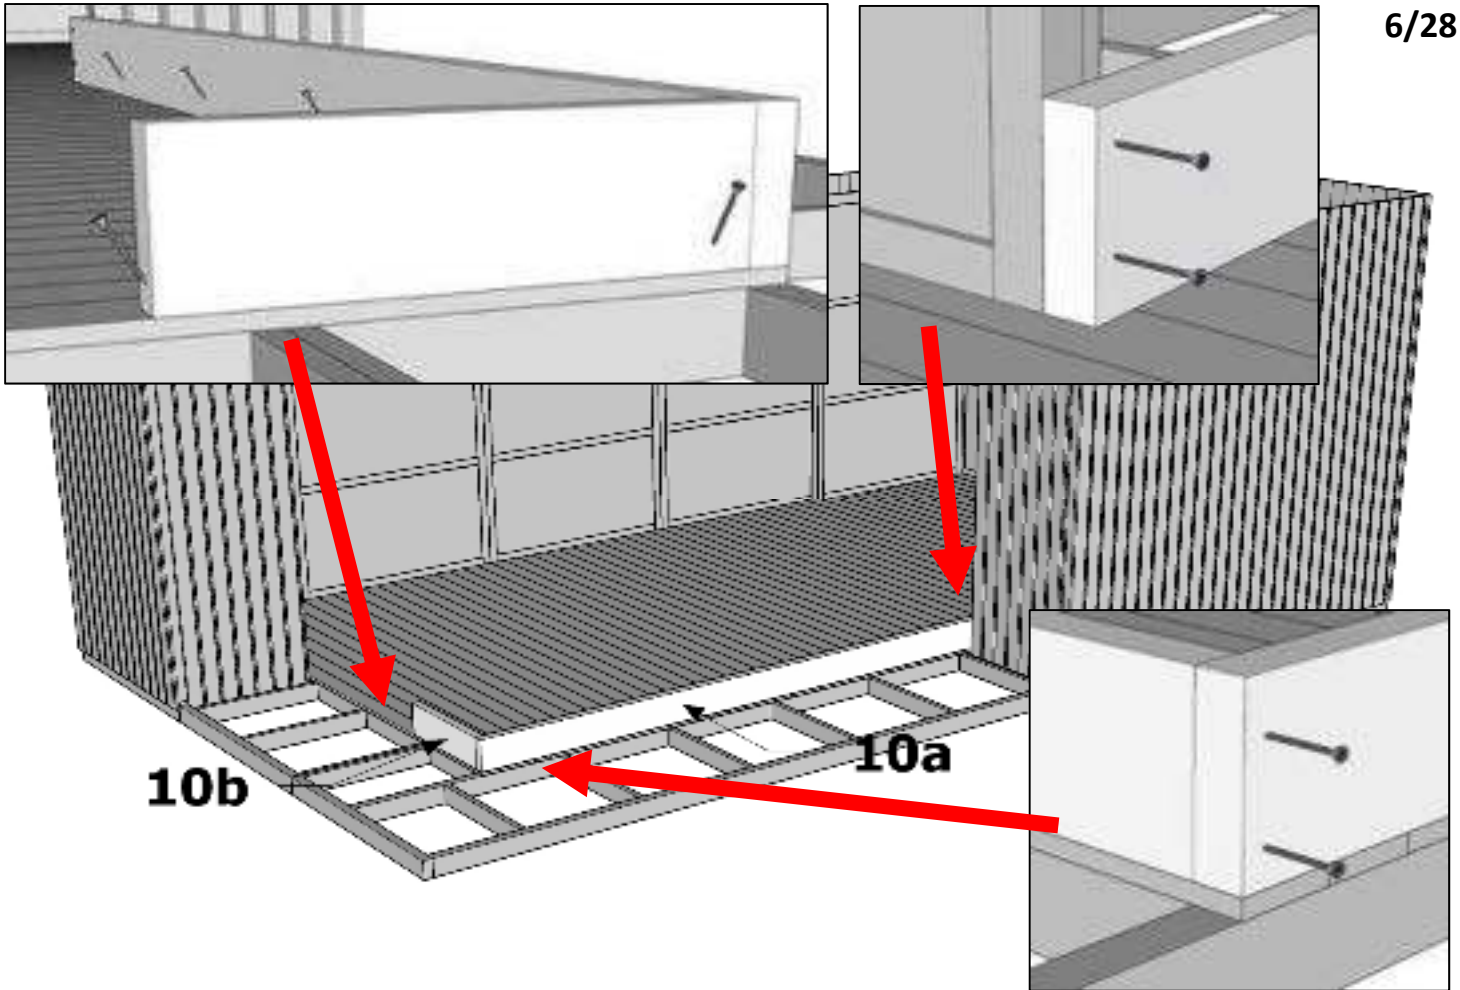

+ 10a + 10b


12	4,5 x 80
----	----------

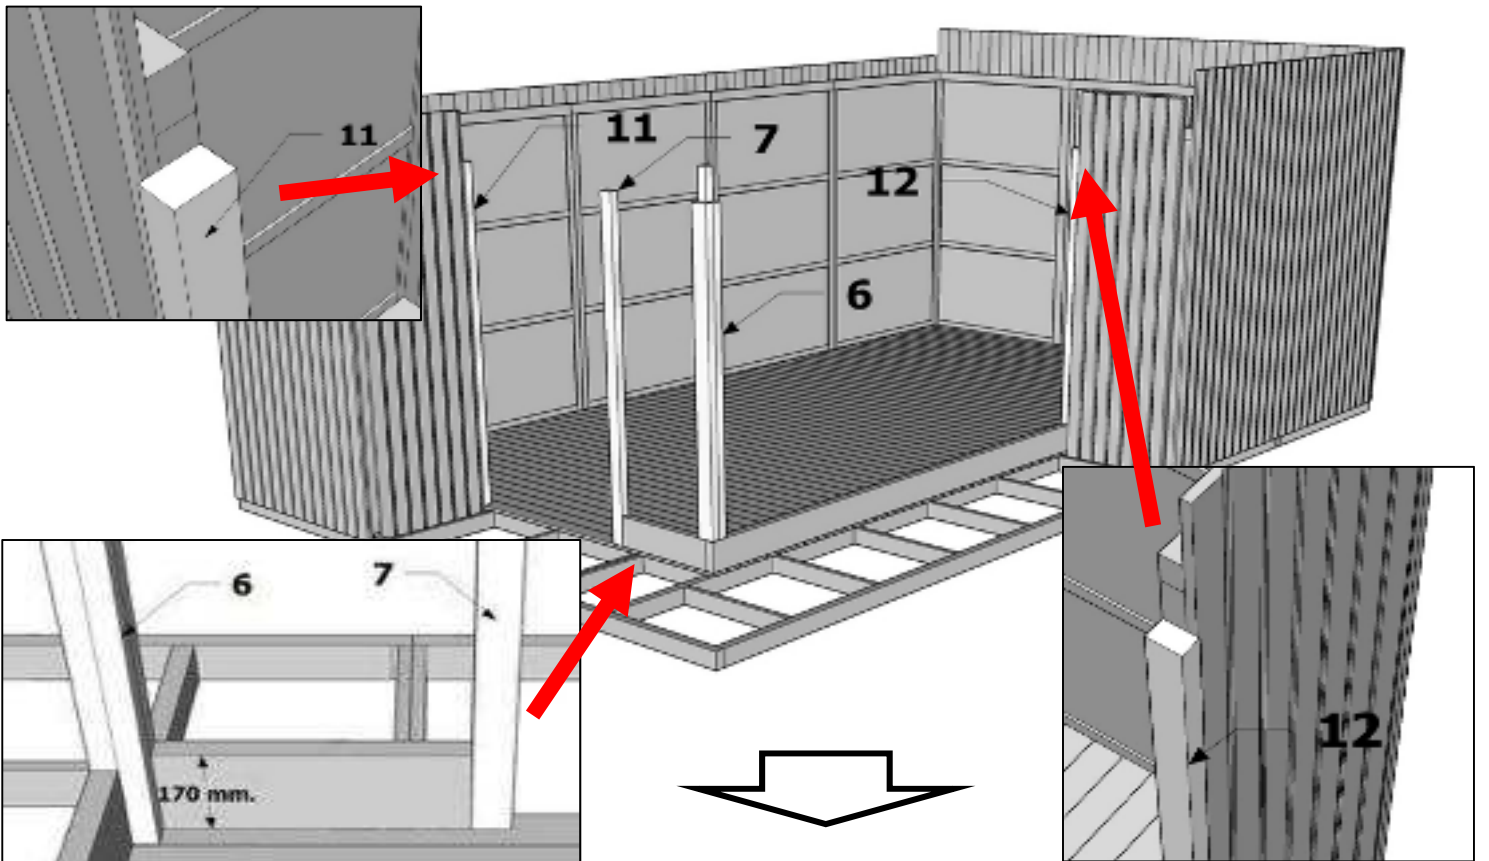


OFFICE 21 insulated Assembly instruction

7/28

11 + **12** + **6** + **7** **14** 4,5 x 80

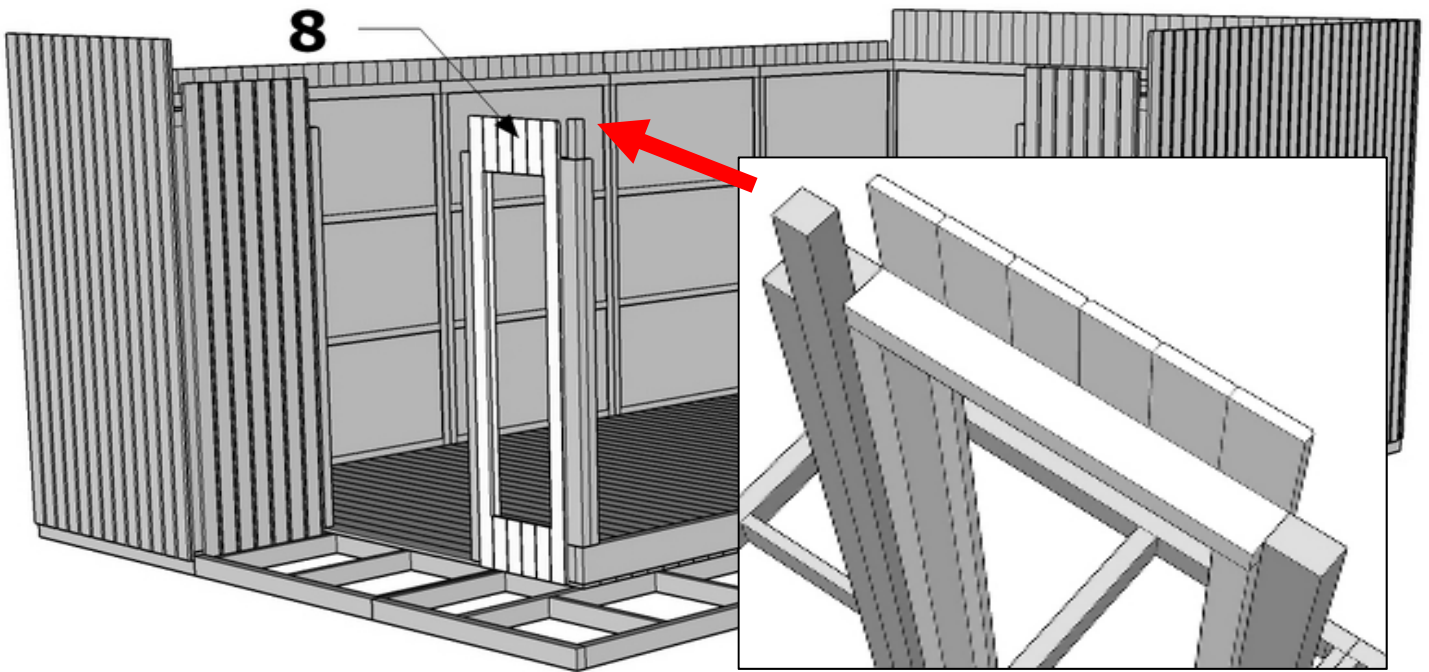



+ **8** **8** 4,5 x 80

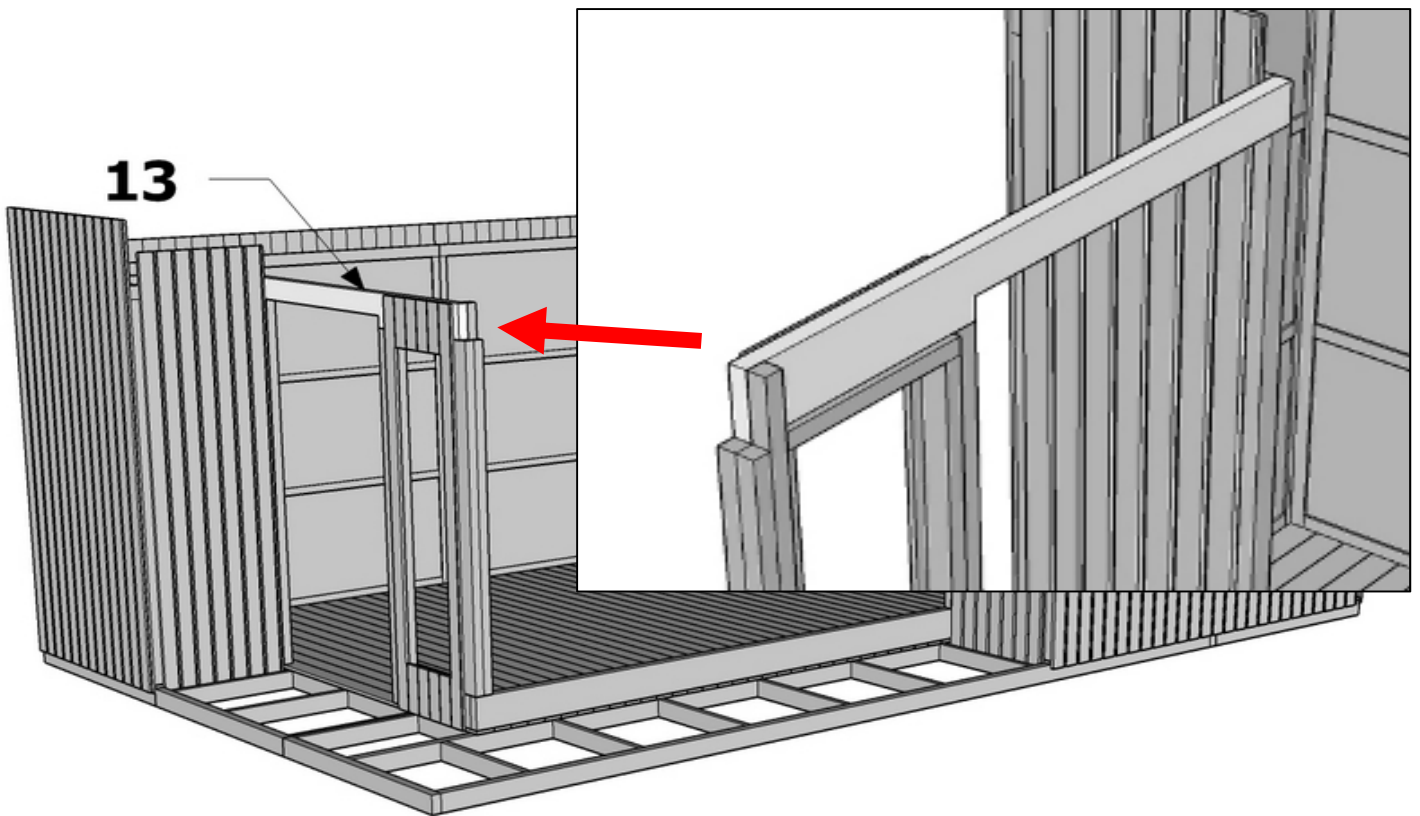

+ **13** **6** 4,5 x 80

OFFICE 21 insulated Assembly instruction

8/28

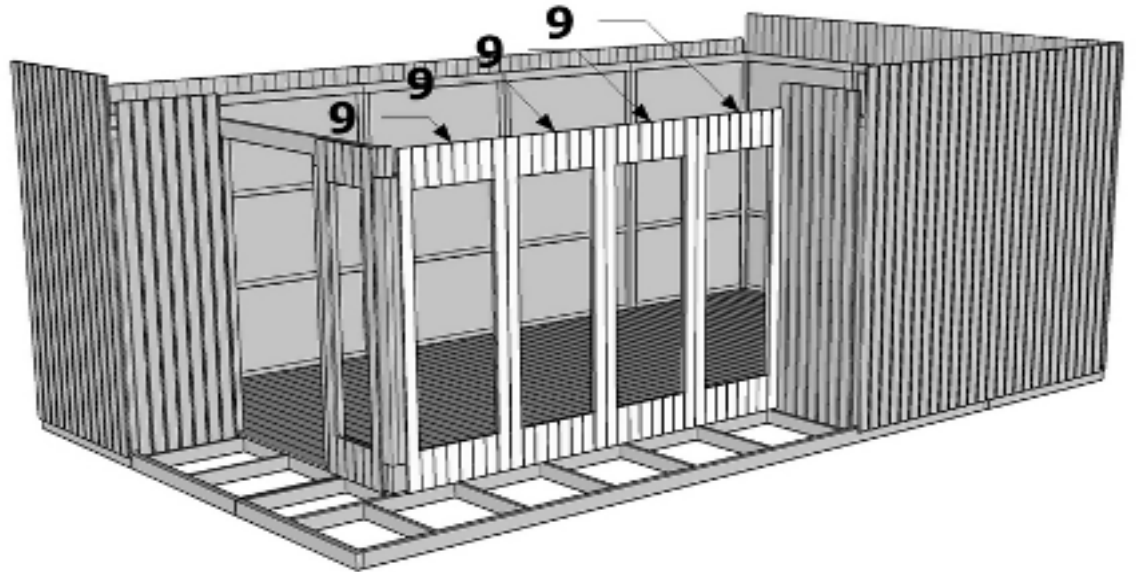
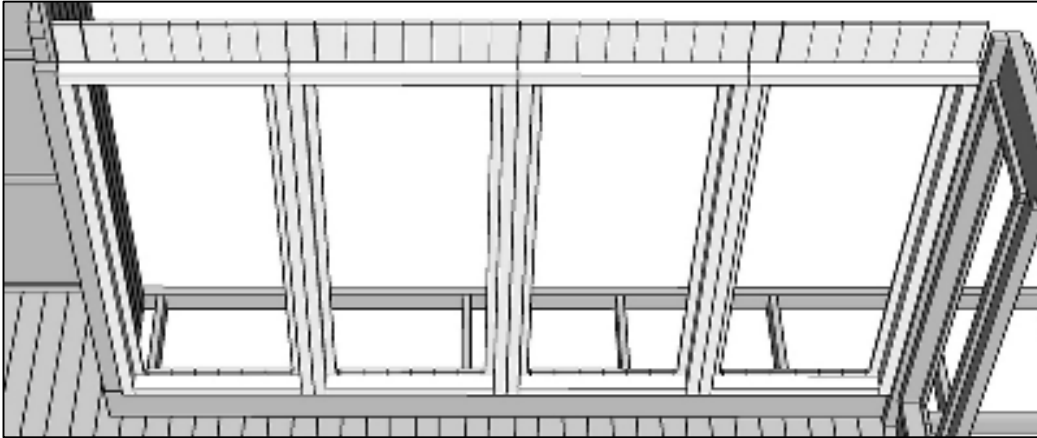


+

9

28

4,5 x 80

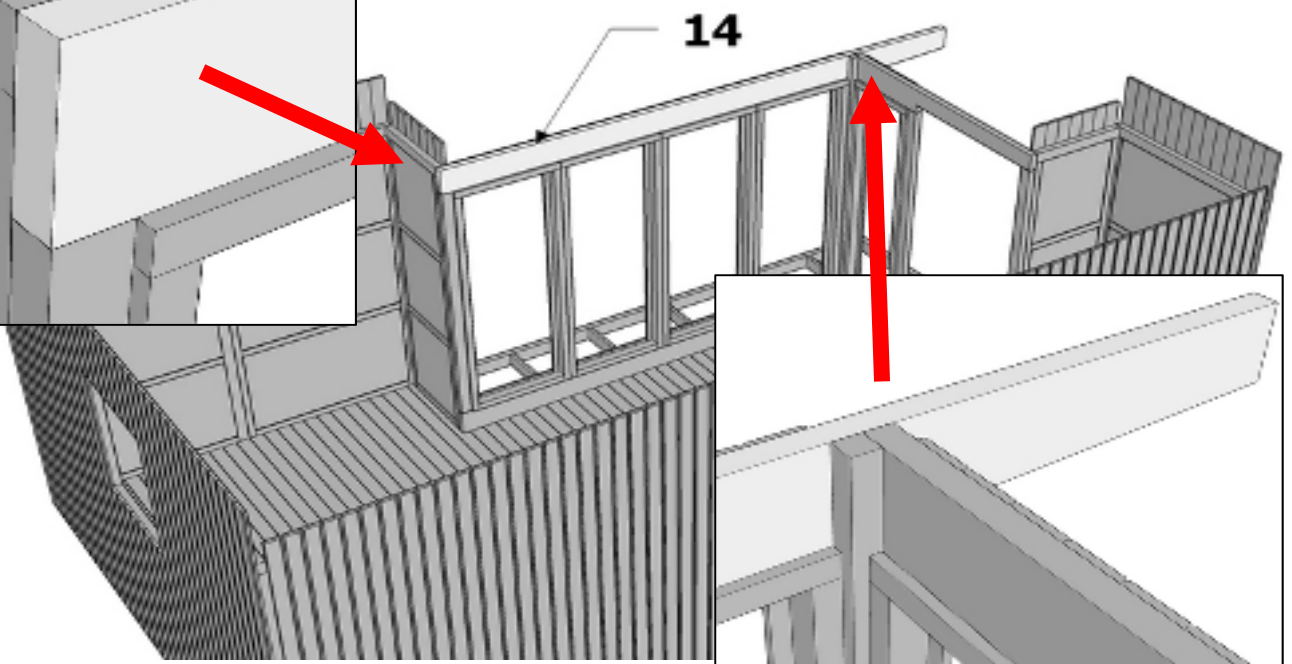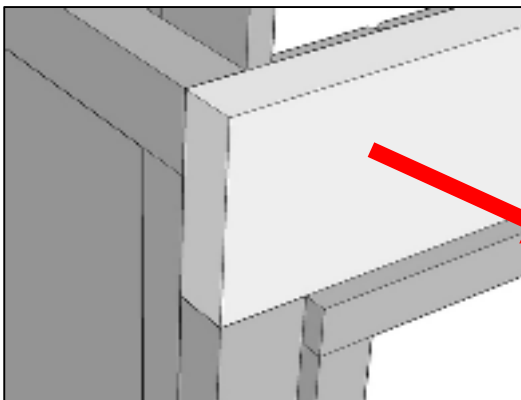



+

14

12



4,5 x 80

OFFICE 21 insulated Assembly instruction

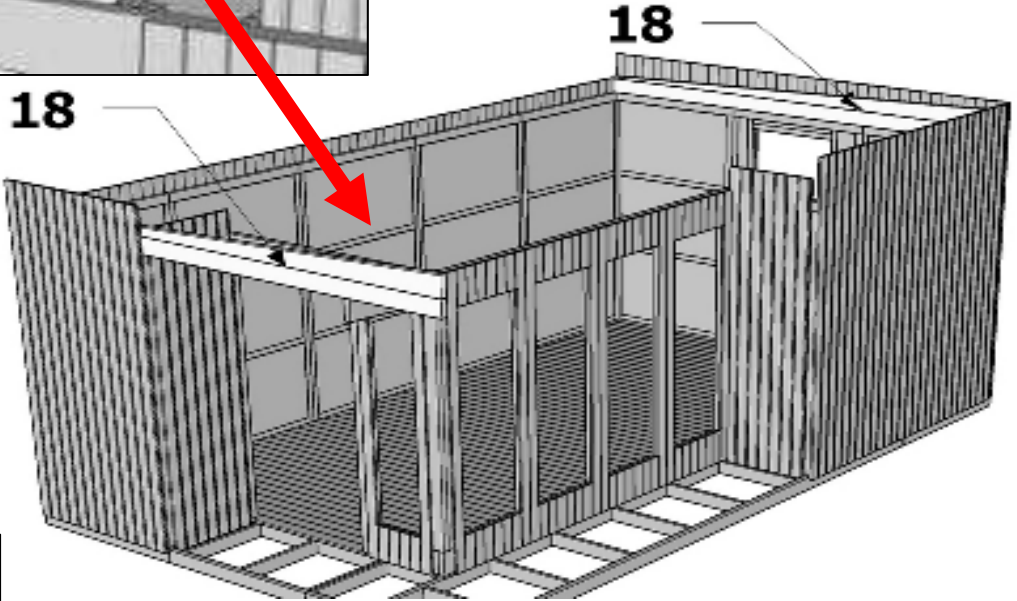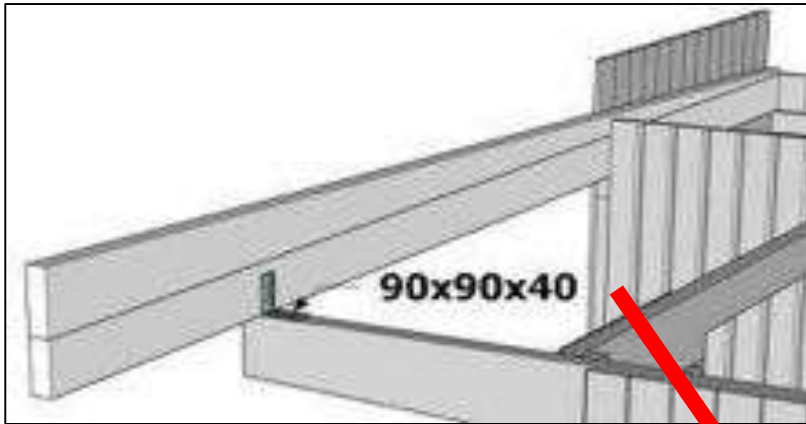

+ **18**

12	5 x 120
1	90x90x40
10	3,5 x 40

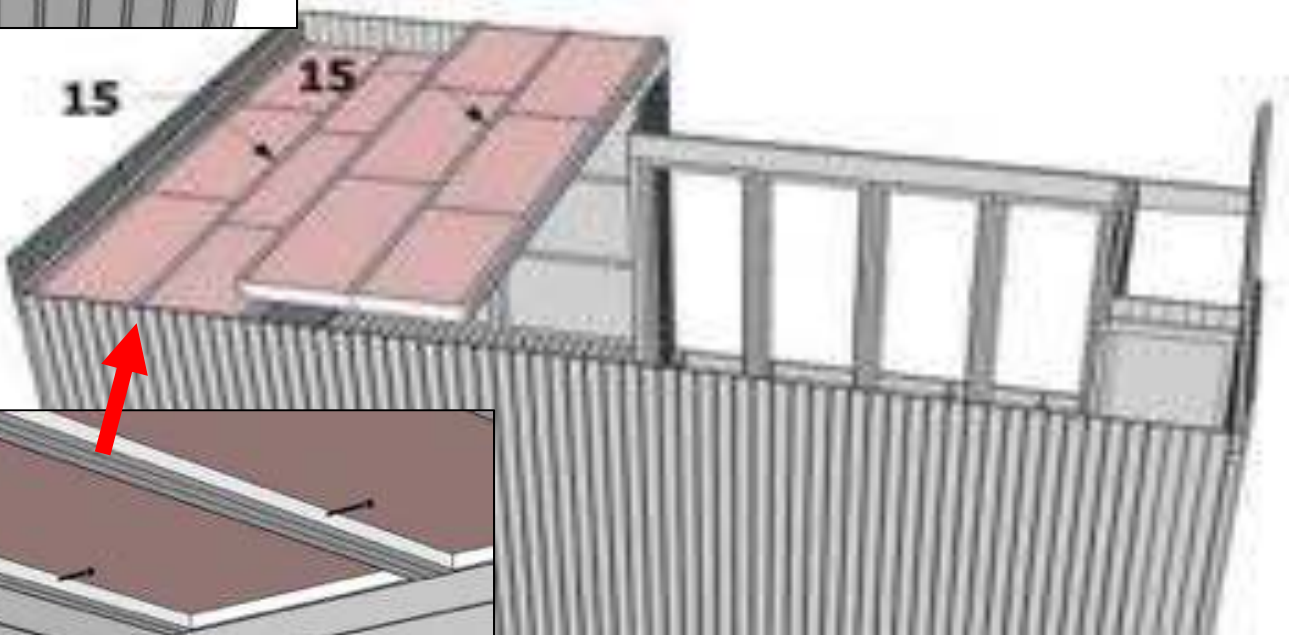
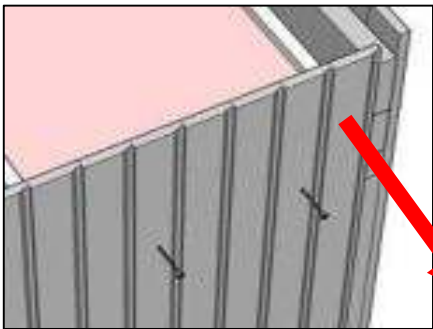


+ **15**

22	4 x 60
----	--------

OFFICE 21 insulated Assembly instruction

10/28

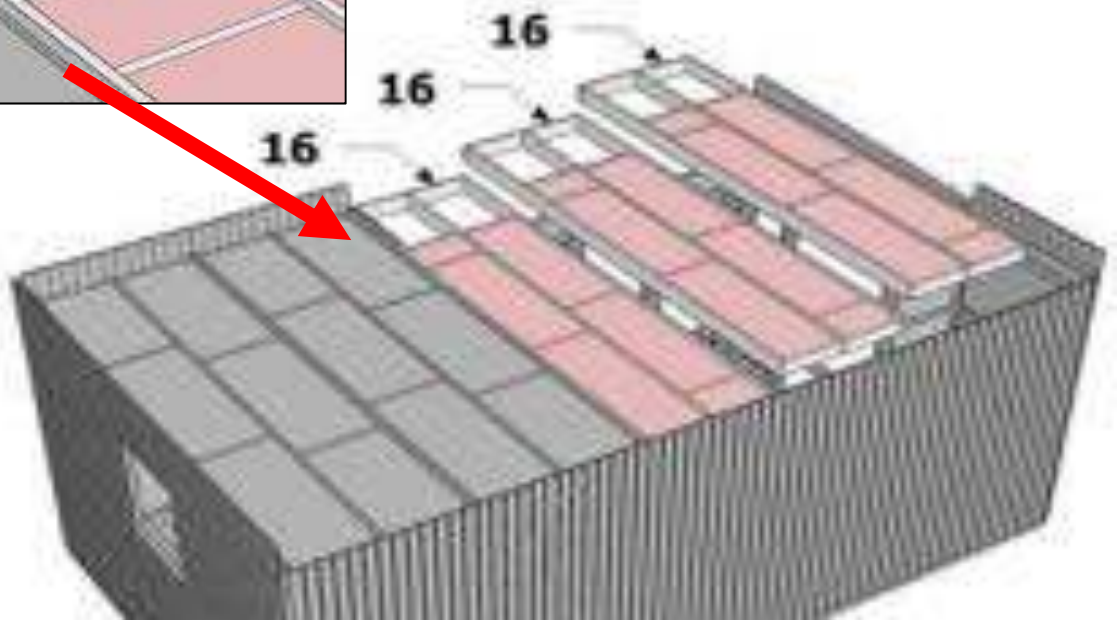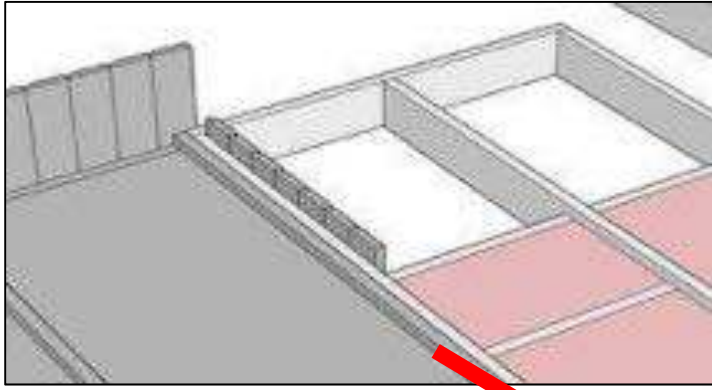


+

16

30

4 x 60

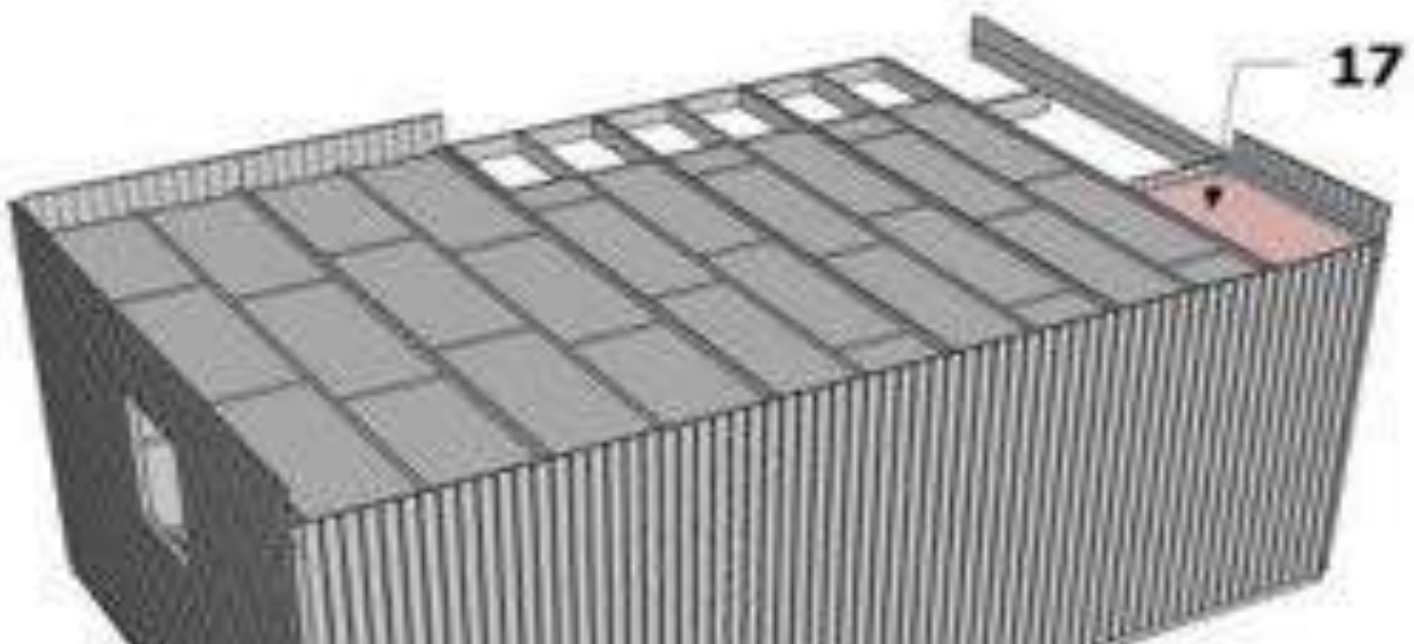

+


17

14

4 x 60



OFFICE 21 insulated Assembly instruction

11/28

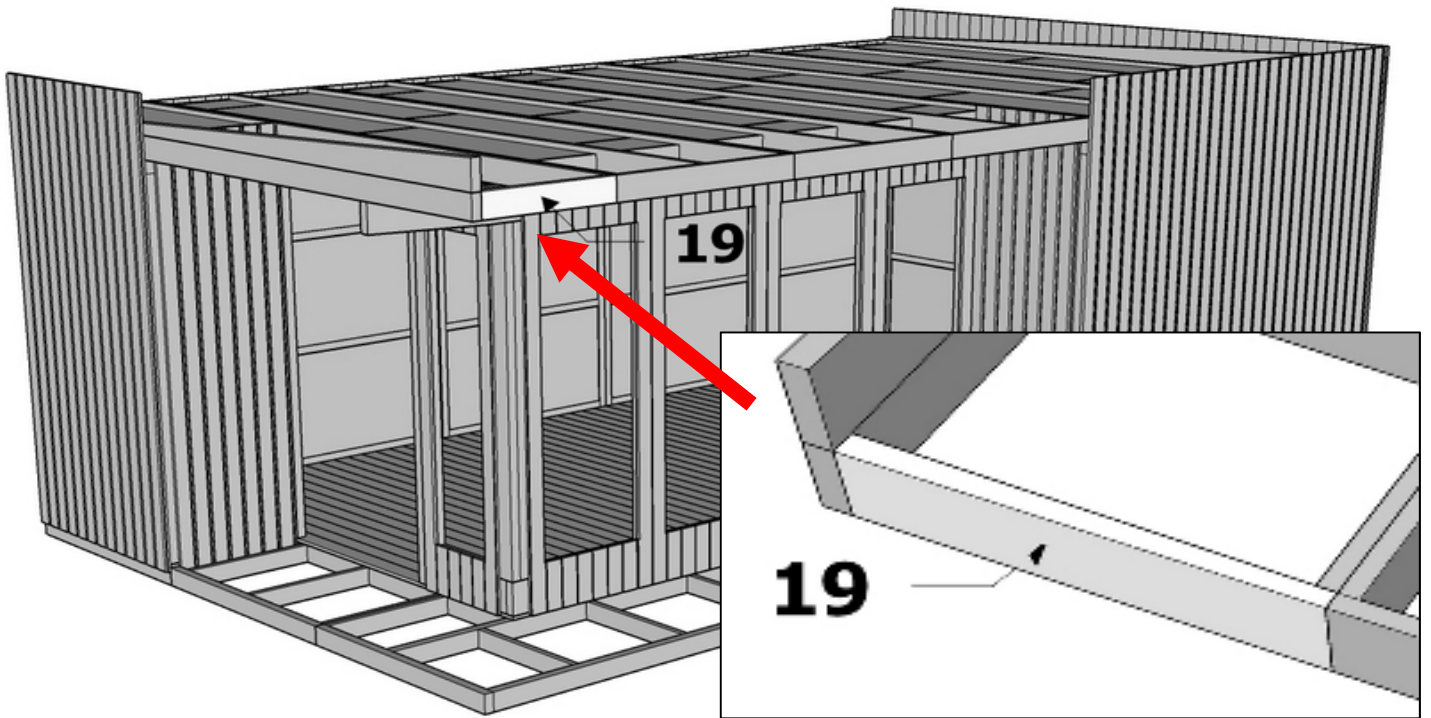

+ **19**

4	4,5 x 80
---	----------

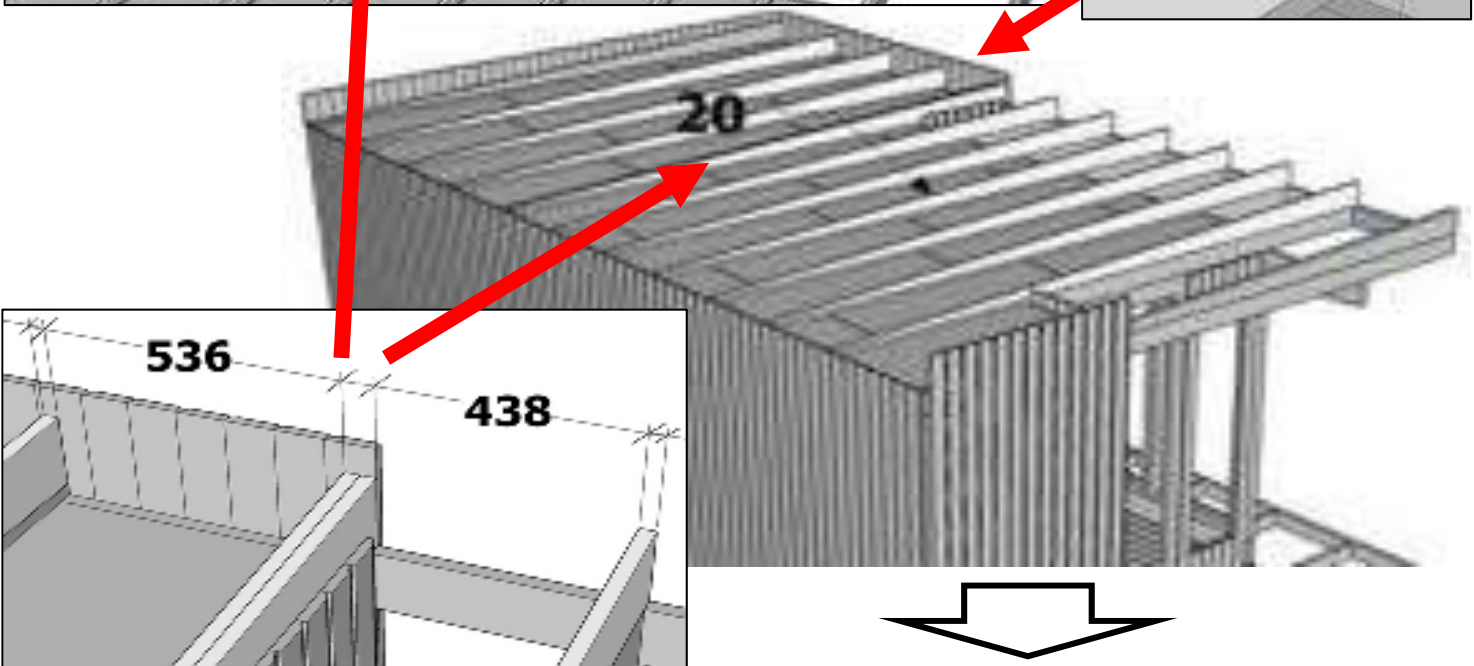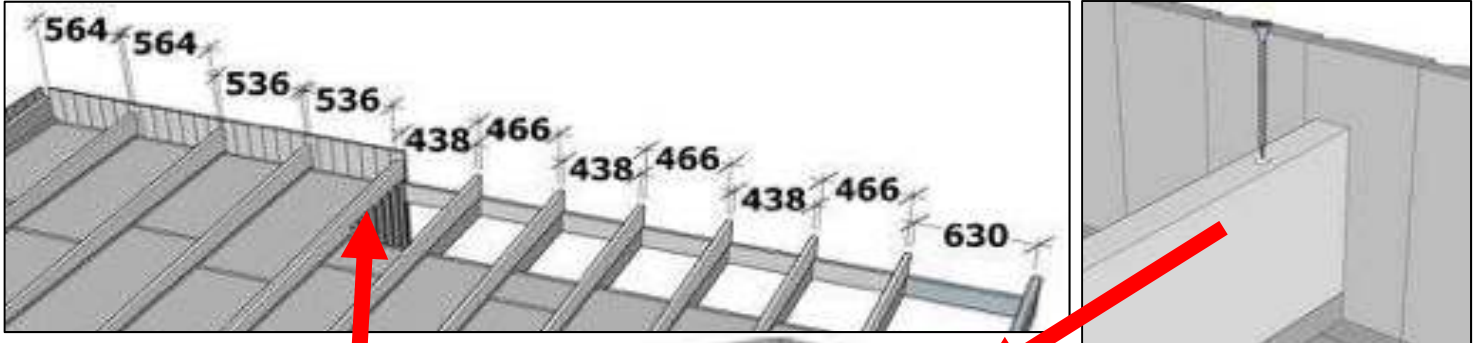


OFFICE 21 insulated Assembly instruction



12/28

+ **20**

33	4,5 x 80
33	5 x 120

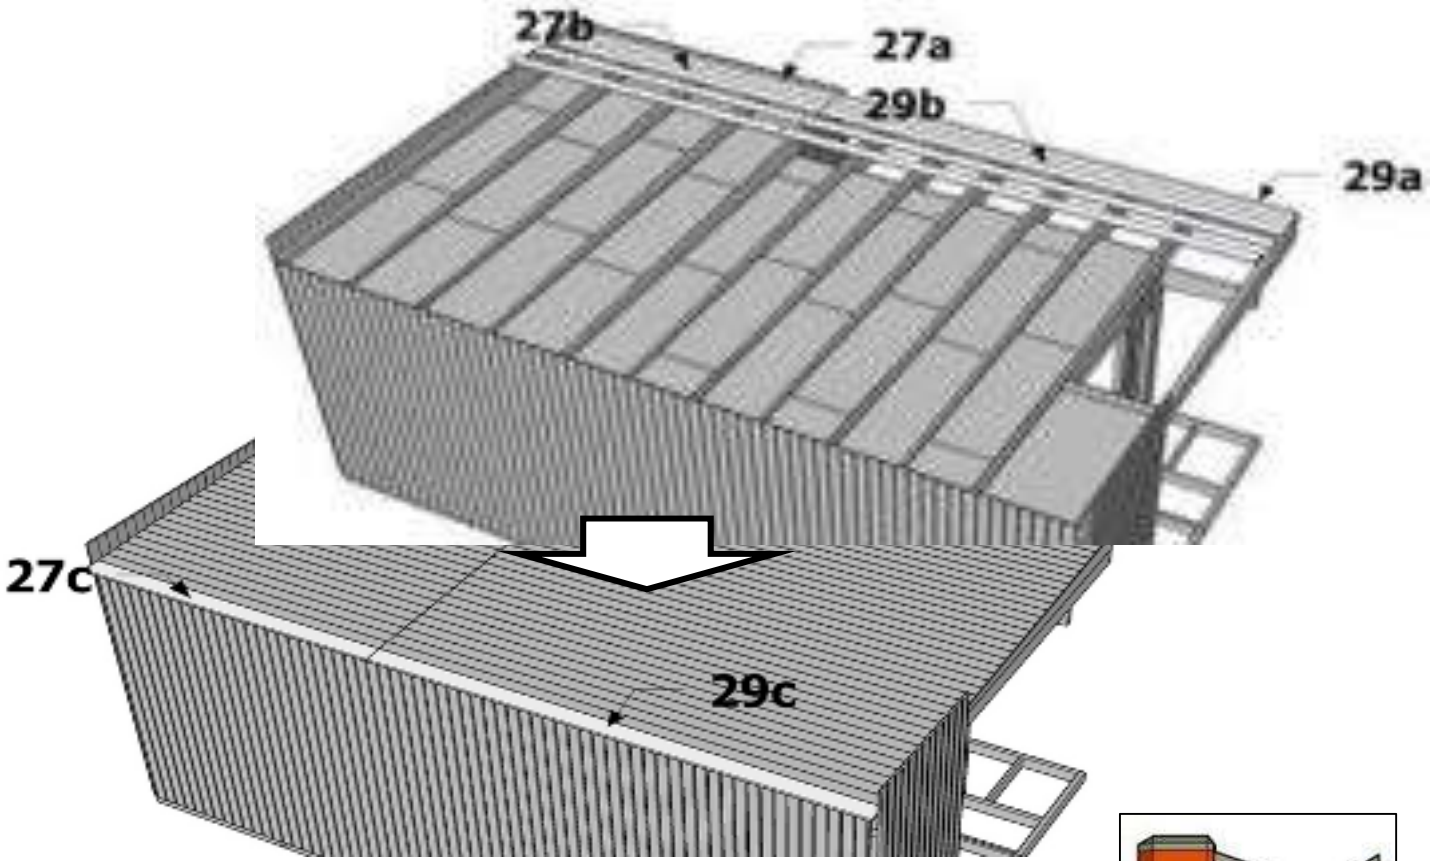








+ **27a** + **29a** + **27b**
 + **29b** + **27c** + **29c**

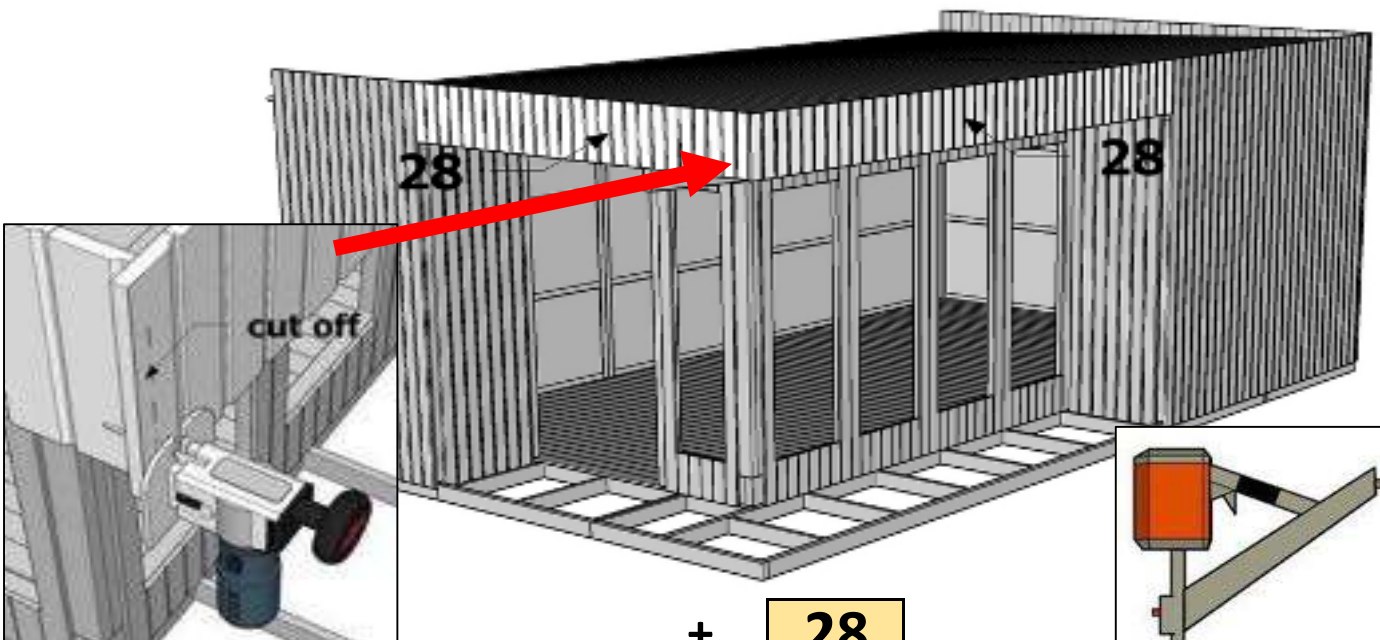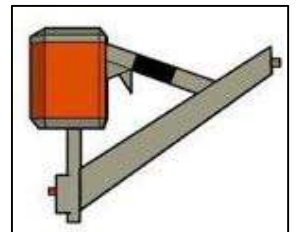

+ **28**

OFFICE 21 insulated Assembly instruction



13/28

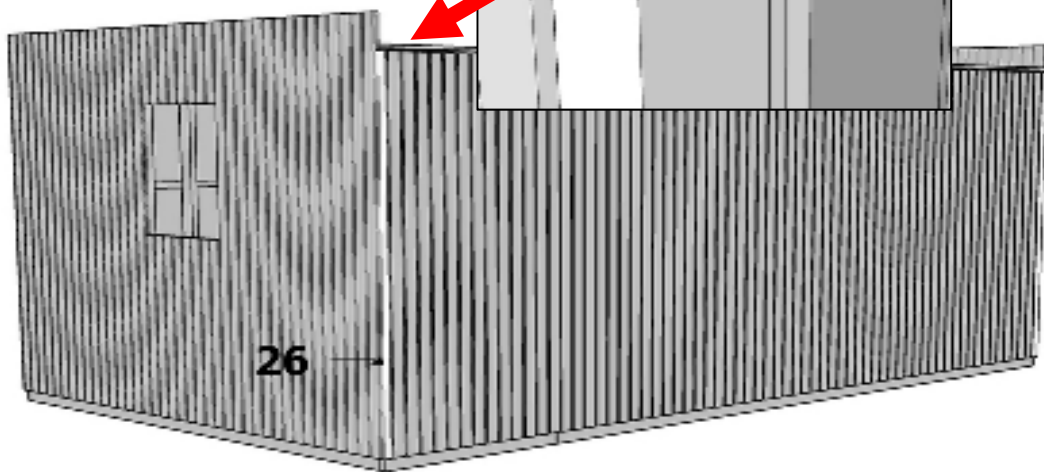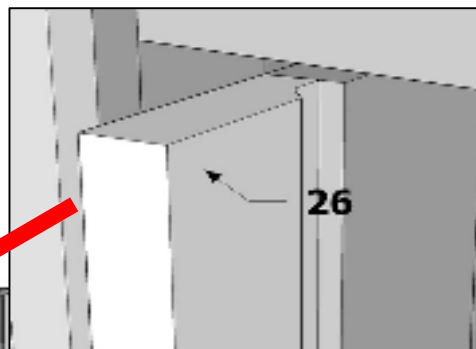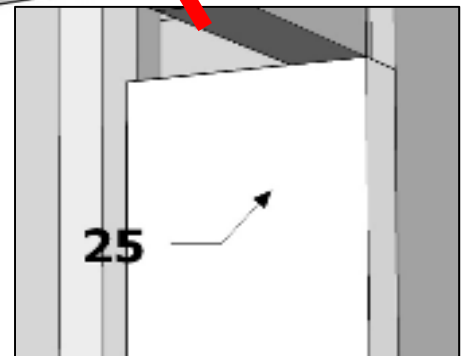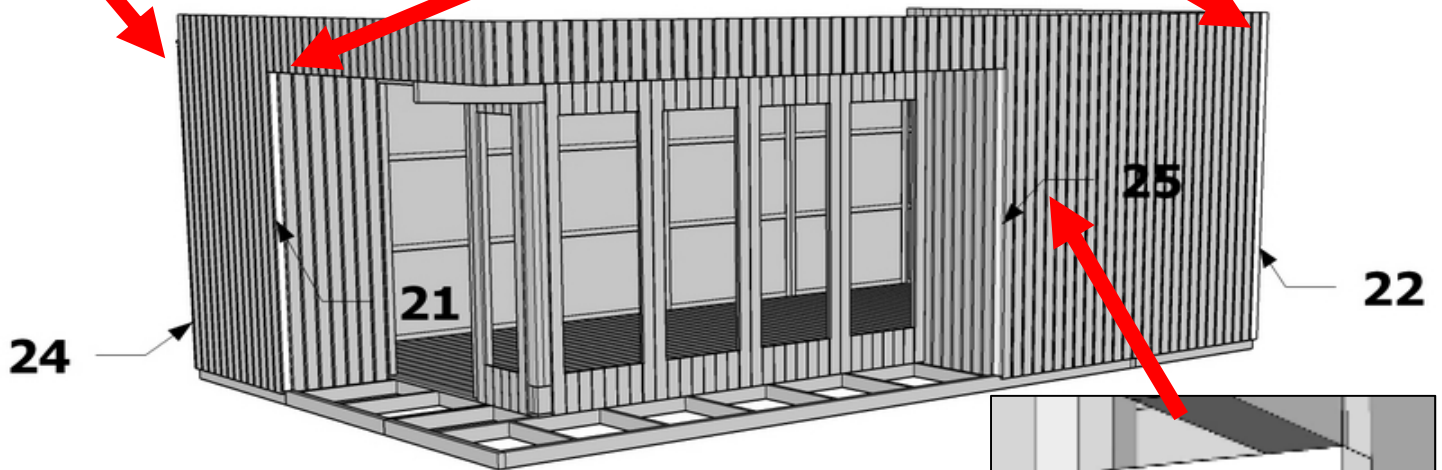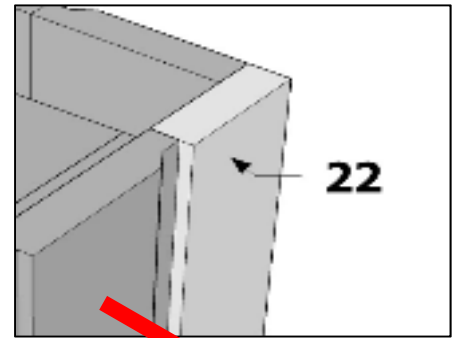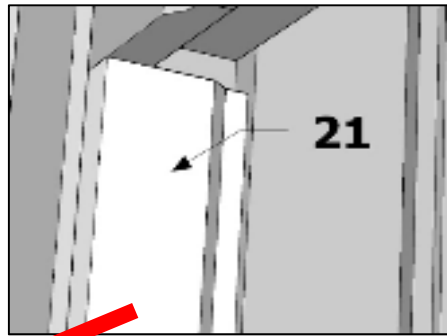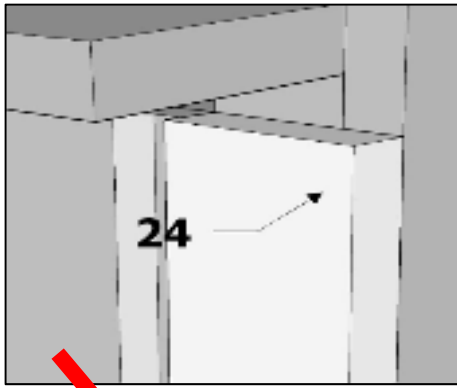

21 + **25** + **22** + **24**
+ **26**

40 | 3,5 x 40


OFFICE 21 insulated Assembly instruction

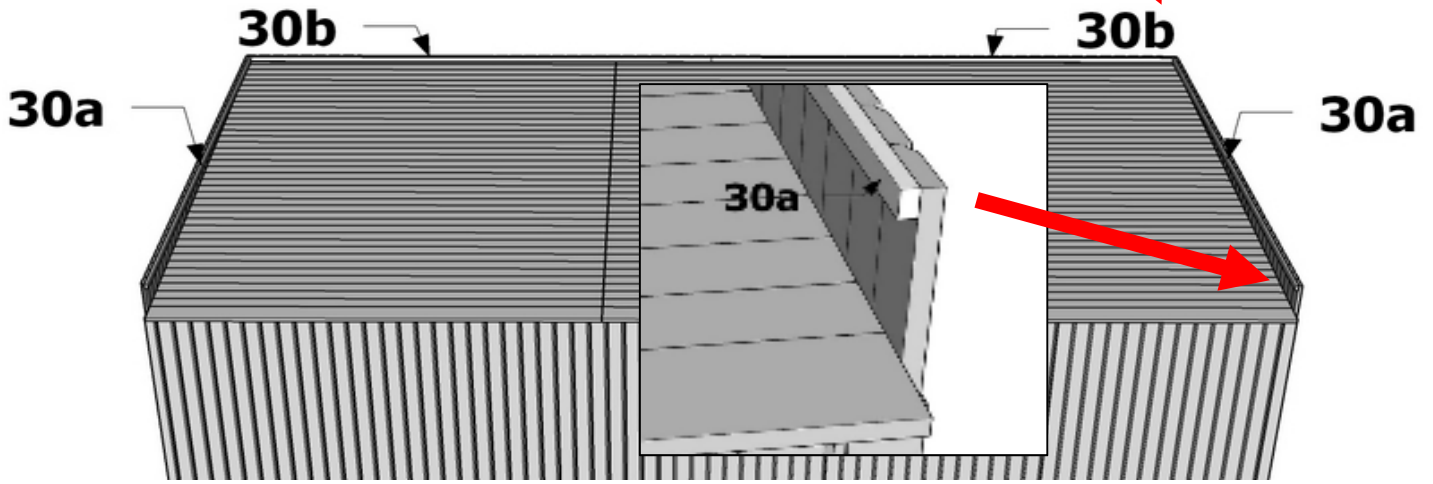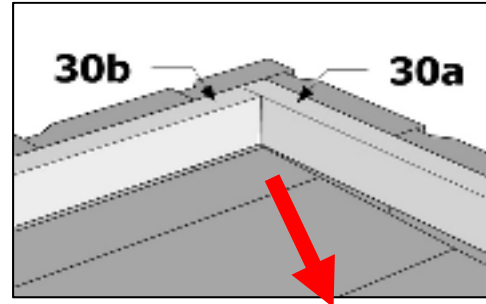


 + 30a + 30b

30	3 x 30
----	--------

In this phase You should install the roofing

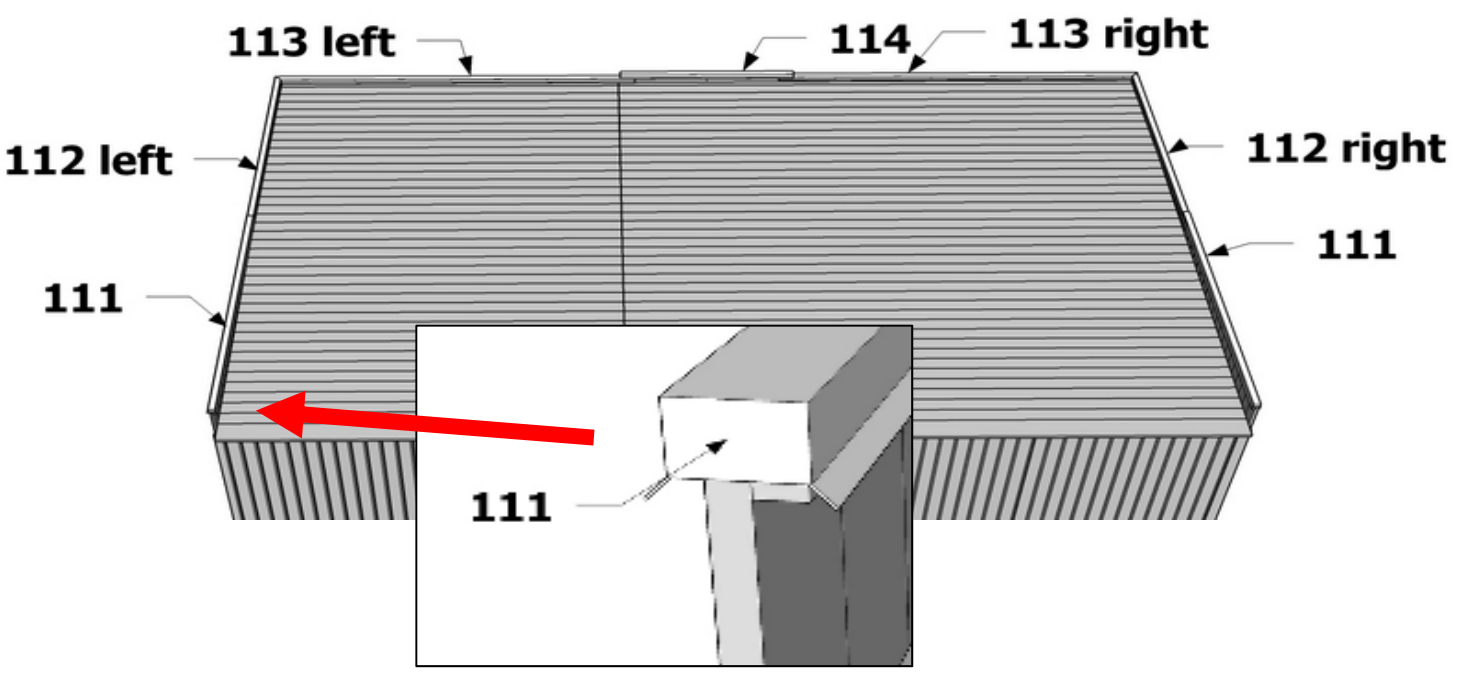


113r + 113l + 114 + 112l

22	special
----	---------

+ 111 + 112r + 111

OFFICE 21 insulated Assembly instruction

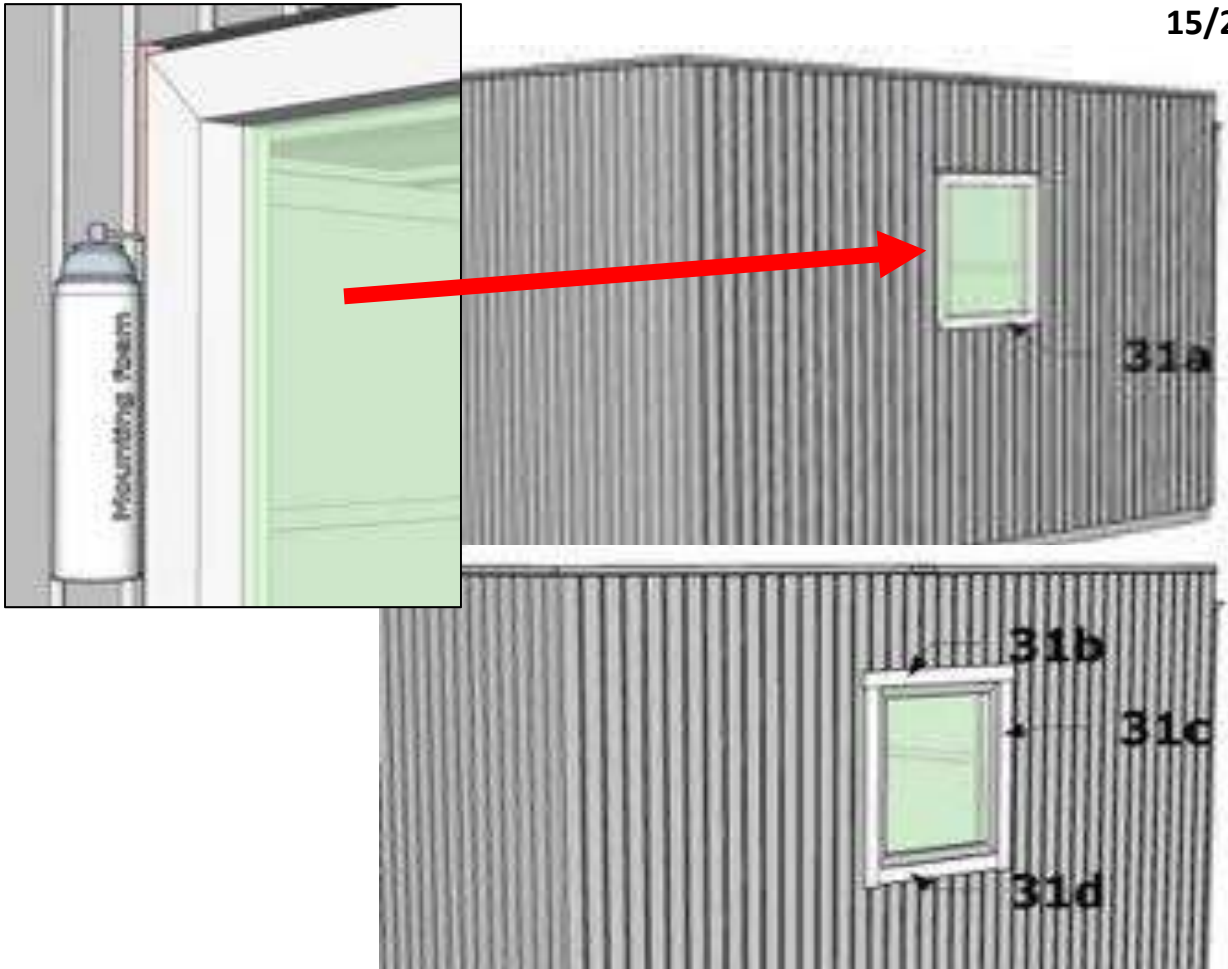


+ **31b** + **31c** + **31d**




24	3,5 x 40
----	----------



45 + **46** + **47** + **48**
+ **49** + **44** + **43**

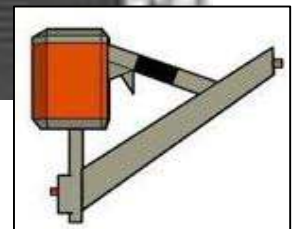

OFFICE 21 insulated Assembly instruction

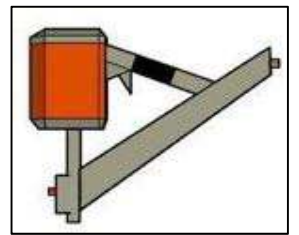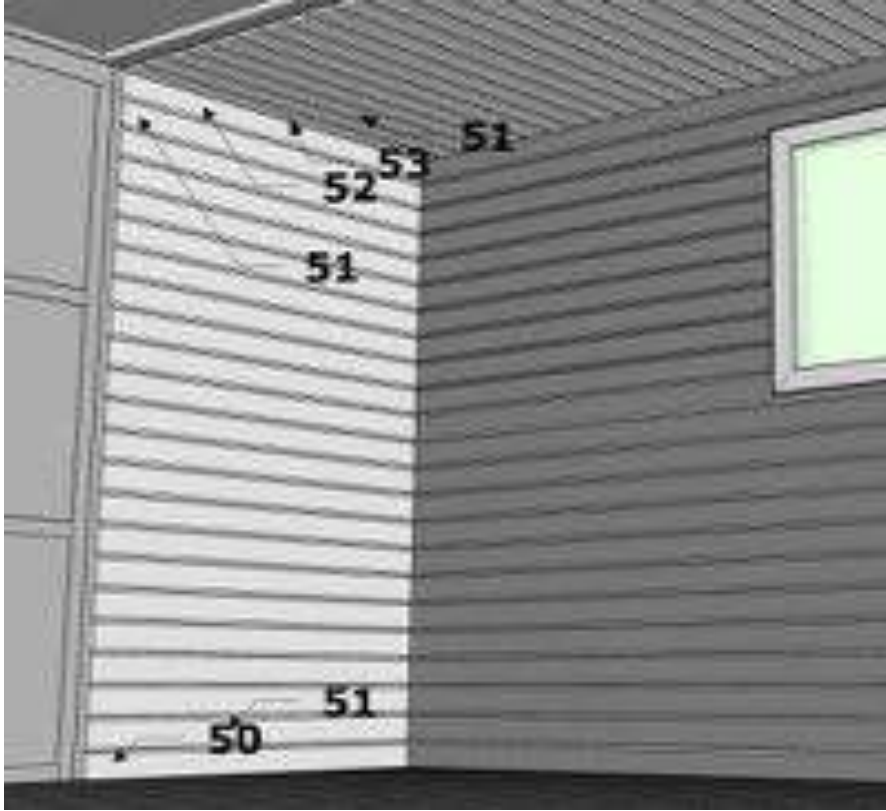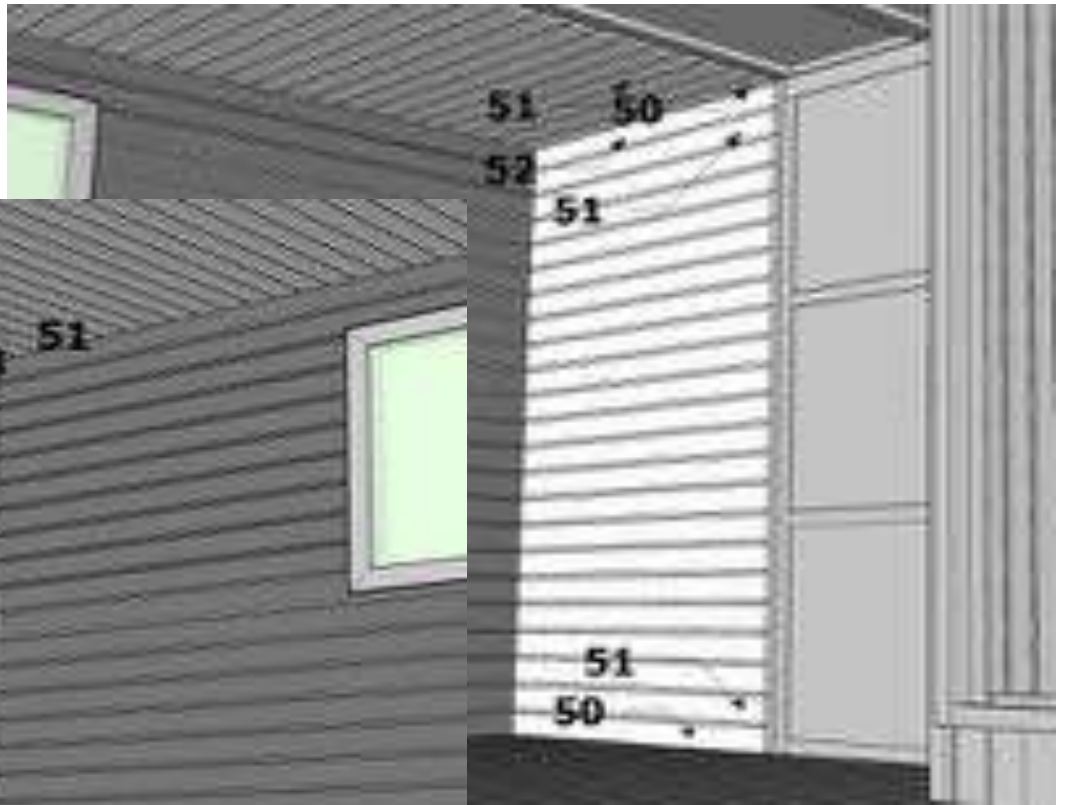


50 + **51** + **52** + **53**



OFFICE 21 insulated Assembly instruction

17/28

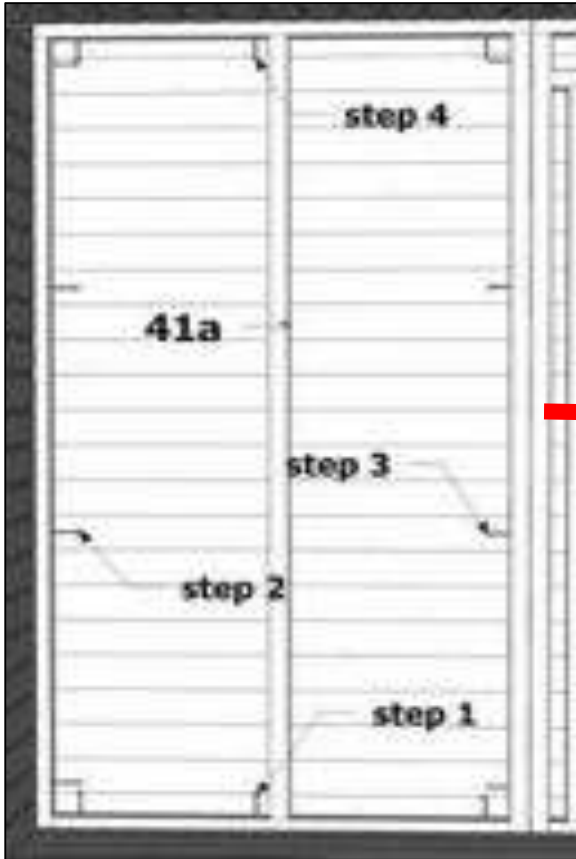


+ **41a** + **41b** + **41a**

32	4,5 x 80
----	----------




54 + **55** + **56** + **57**


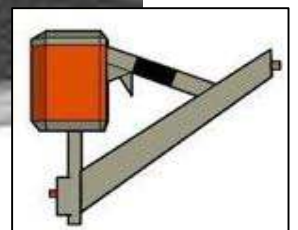


OFFICE 21 insulated Assembly instruction


18/28

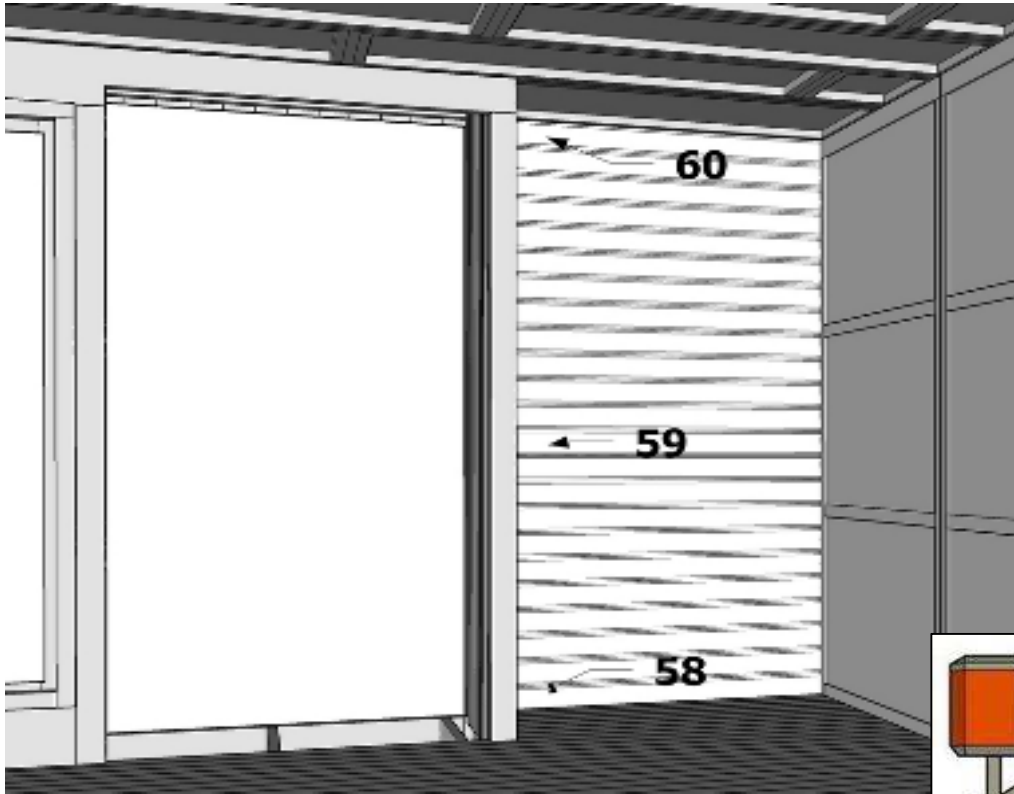

+ **58** + **59** + **60**

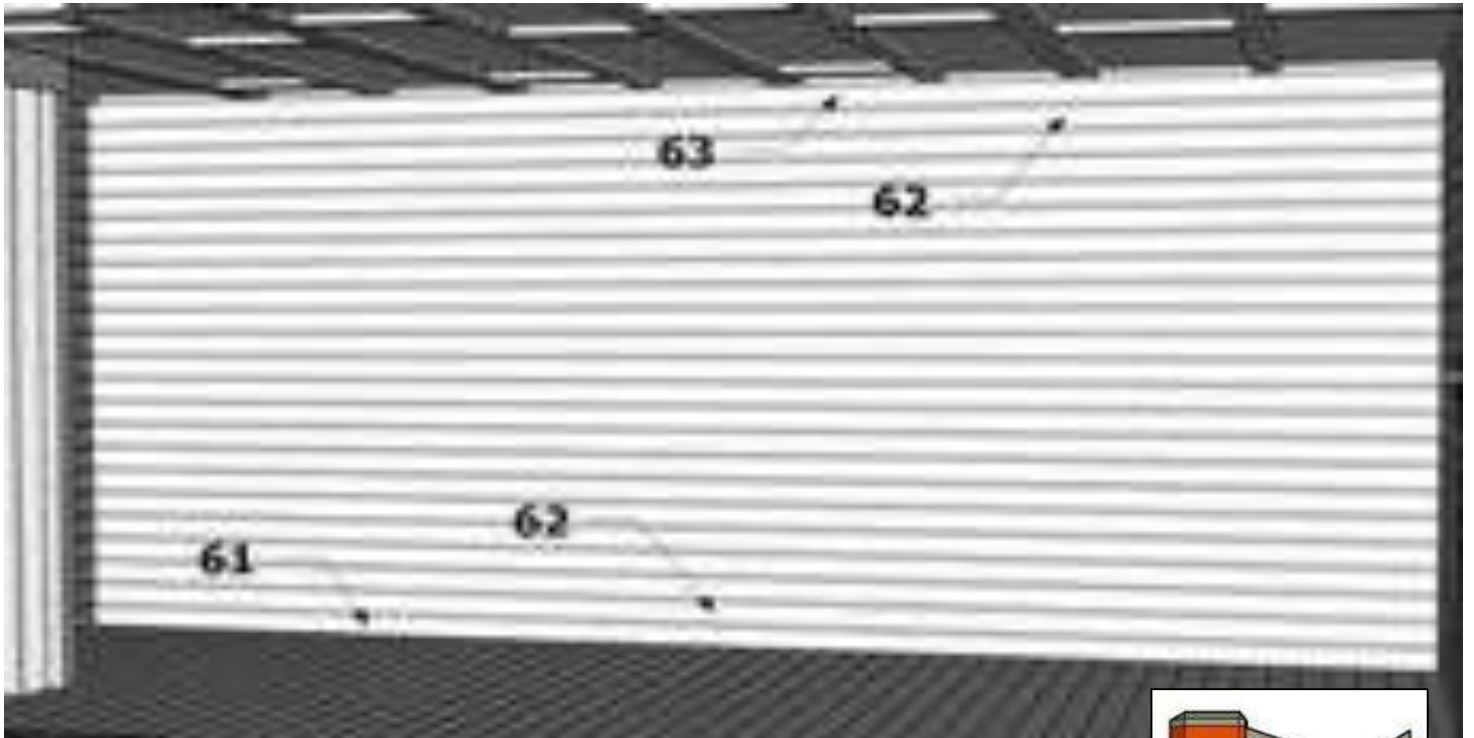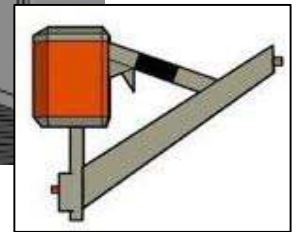


+ **61** + **62** + **63**

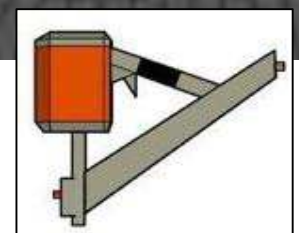


OFFICE 21 insulated Assembly instruction


19/28

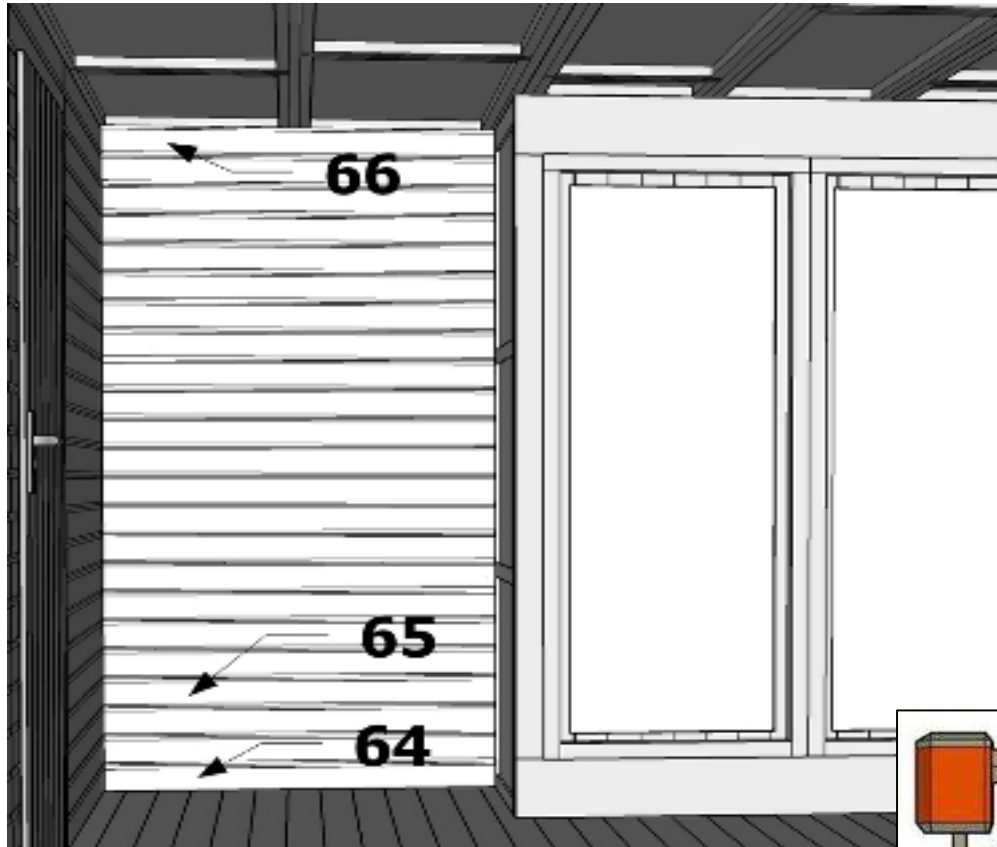


+ **64** + **65** + **66**

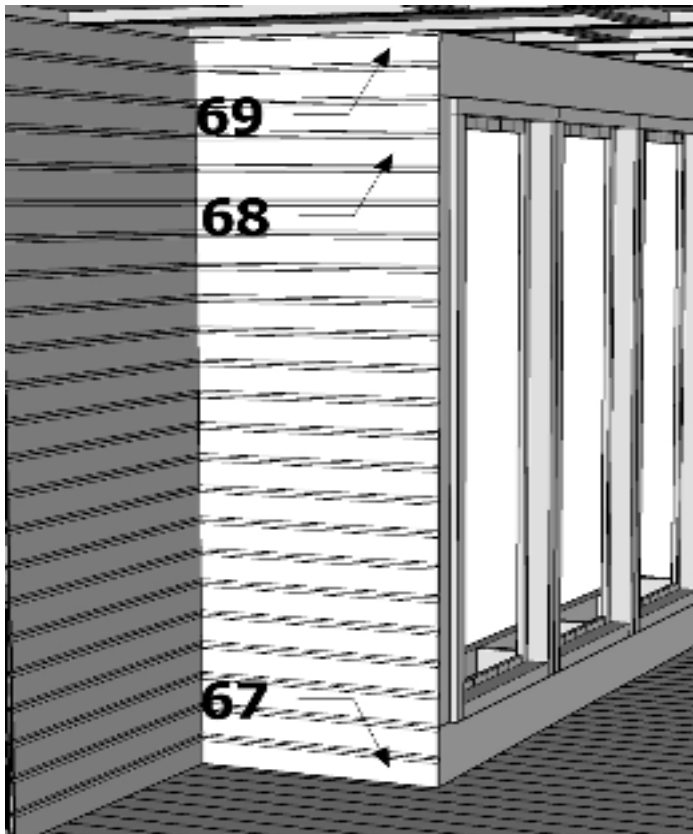



+ **67** + **68** + **69**

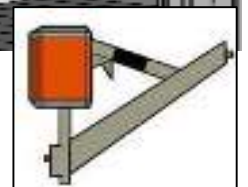

OFFICE 21 insulated Assembly instruction

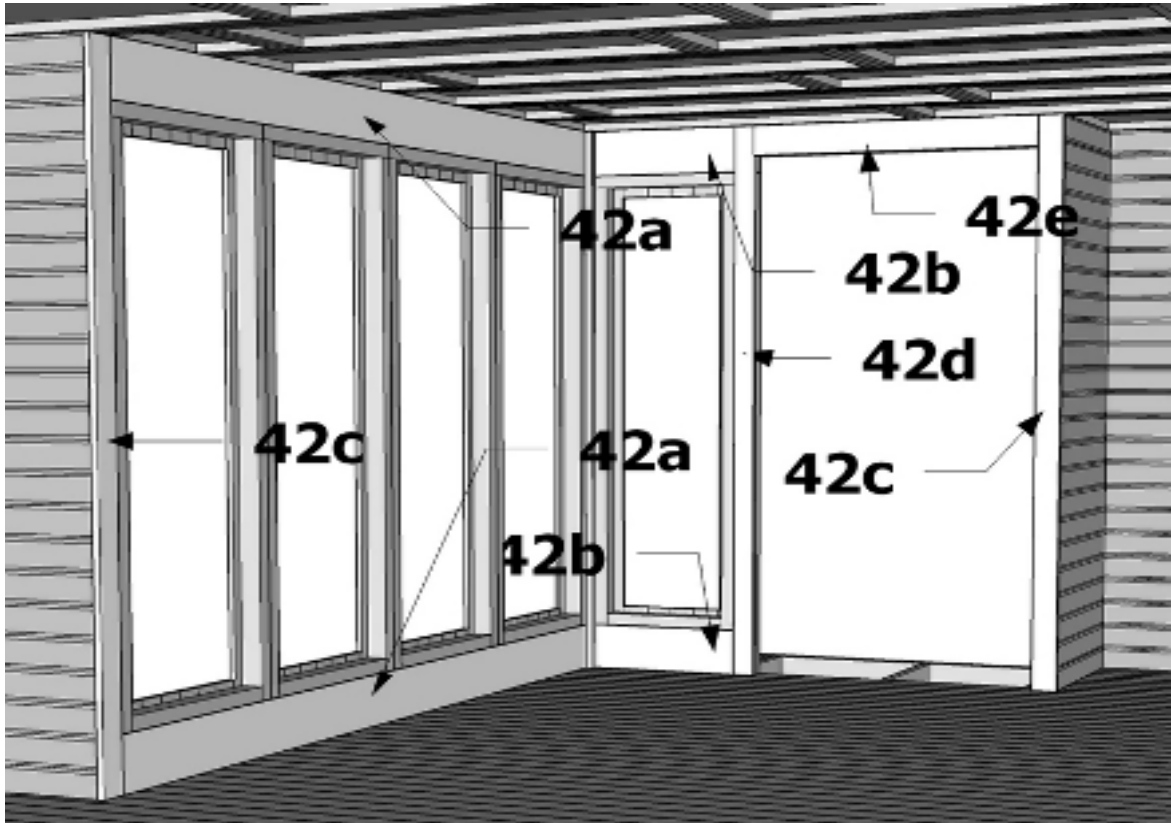


- | | | | | | | | |
|---|------------|---|------------|---|------------|--|--|
| + | 42a | + | 42c | + | 42b | | |
| + | 42d | + | 42e | + | 42c | | |
- | | |
|----|----------|
| 66 | 3,5 x 40 |
|----|----------|

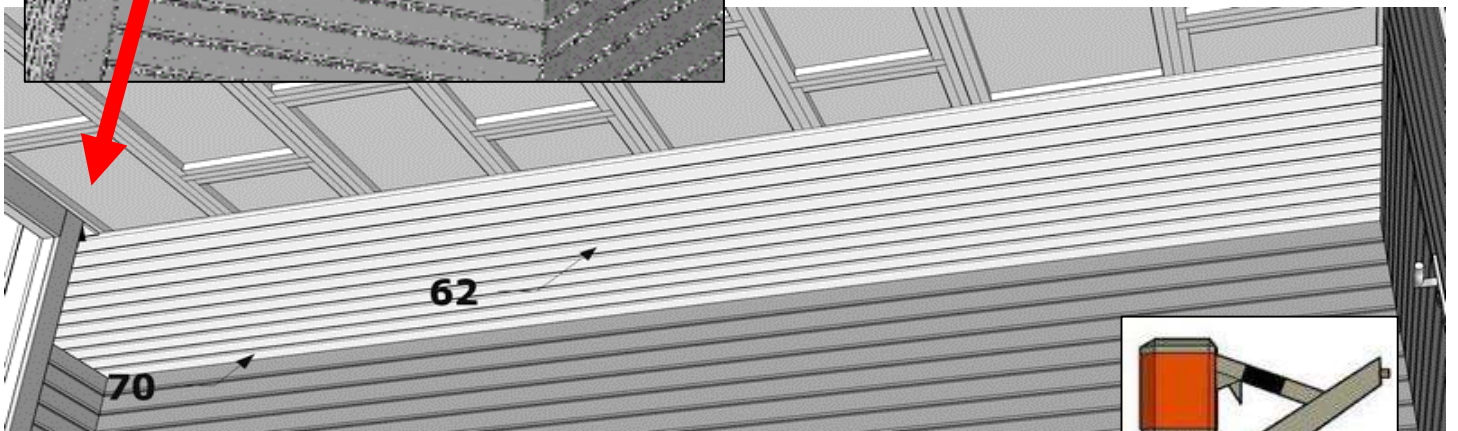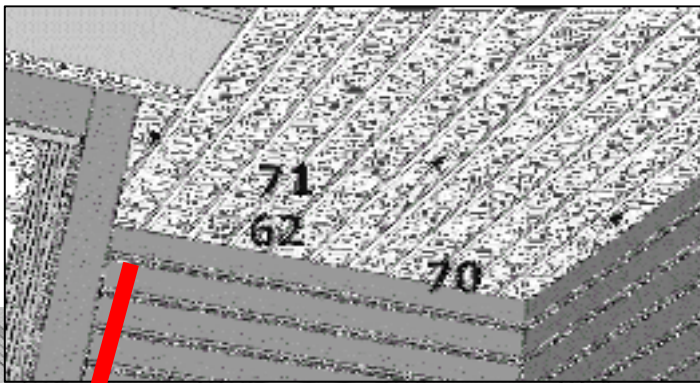


- | | | | | | |
|---|-----------|---|-----------|---|-----------|
| + | 70 | + | 62 | + | 71 |
|---|-----------|---|-----------|---|-----------|

OFFICE 21 insulated Assembly instruction


21/28

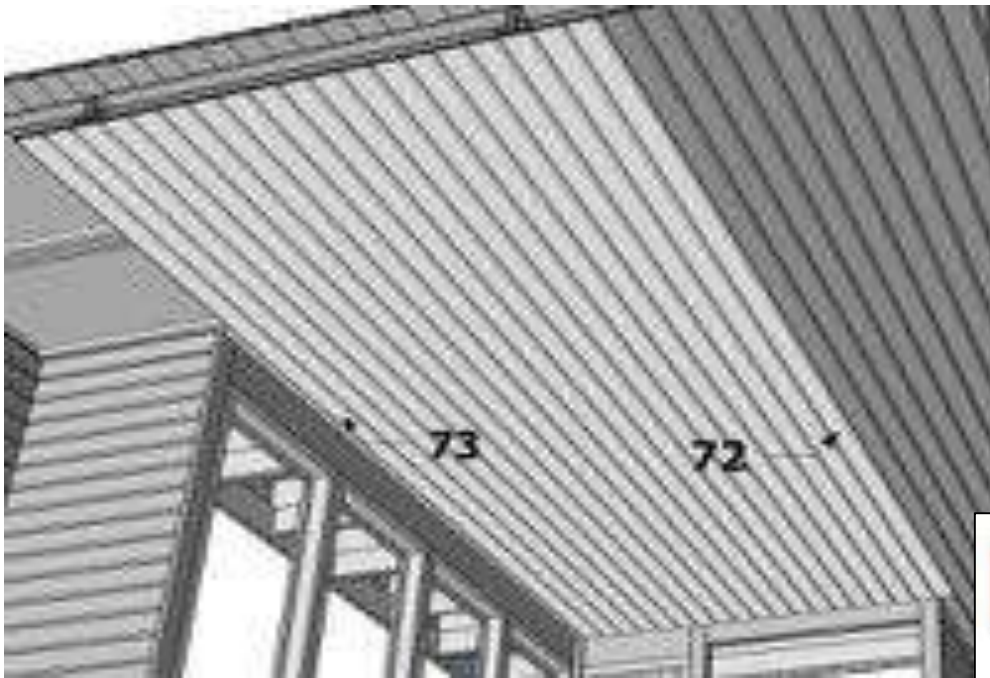

+ **72** + **73**

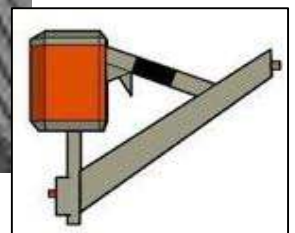


+ **74** + **75**

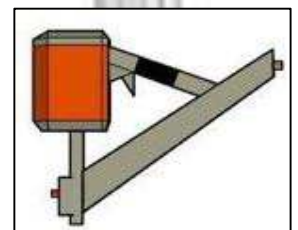

OFFICE 21 insulated Assembly instruction

22/28

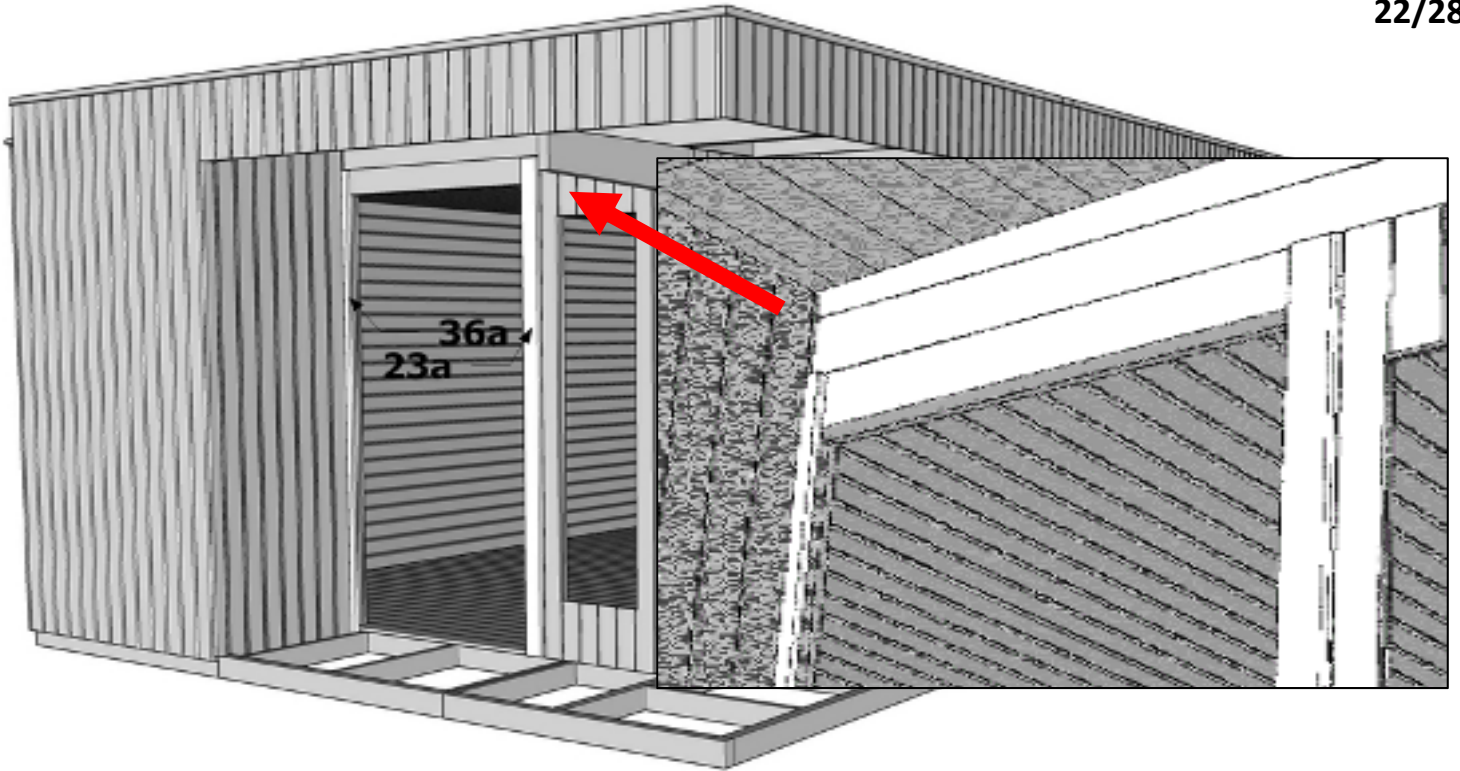

+ **23a** + **36a**



16	3,5 x 40
-----------	----------



+ **36b** + **36c**


8	3,5 x 40
----------	----------

OFFICE 21 insulated Assembly instruction

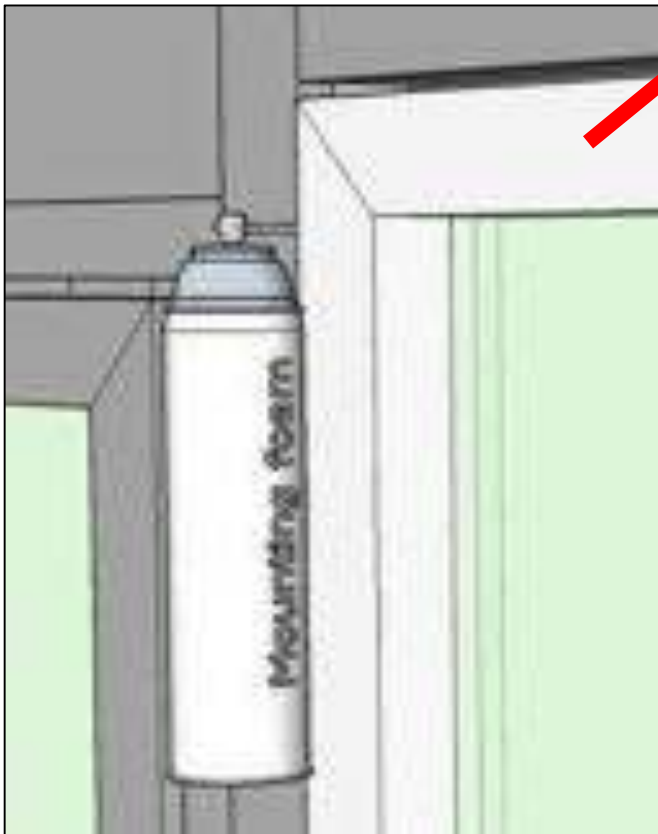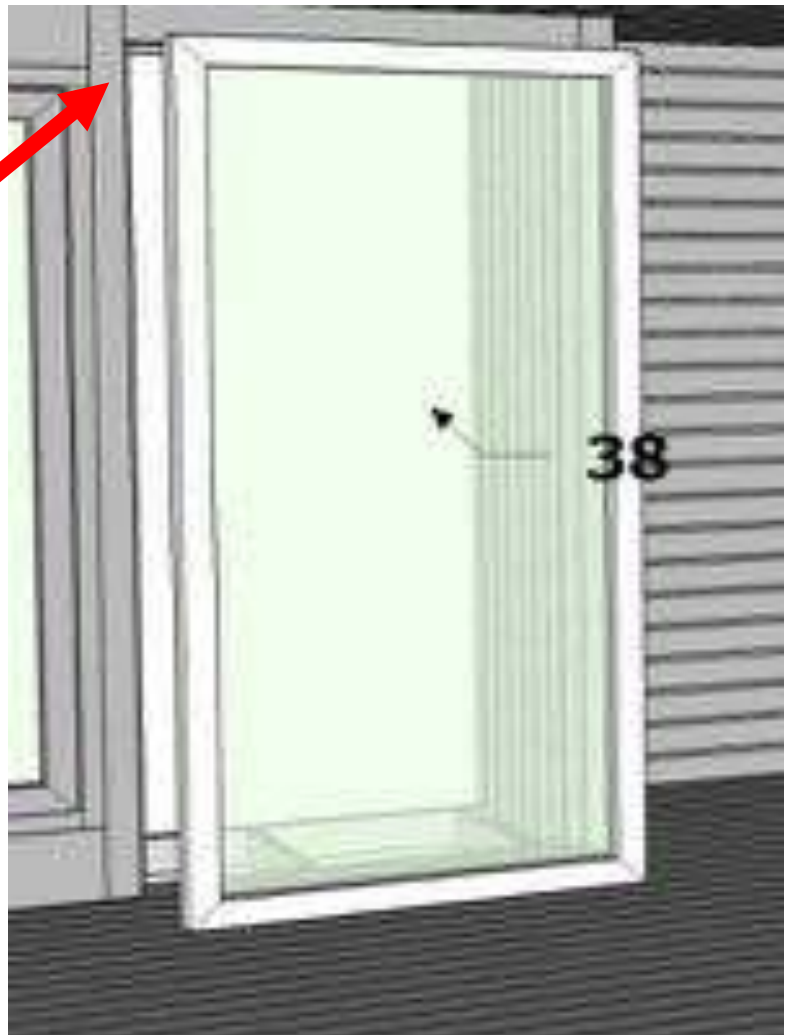


OFFICE 21 insulated Assembly instruction

24/28

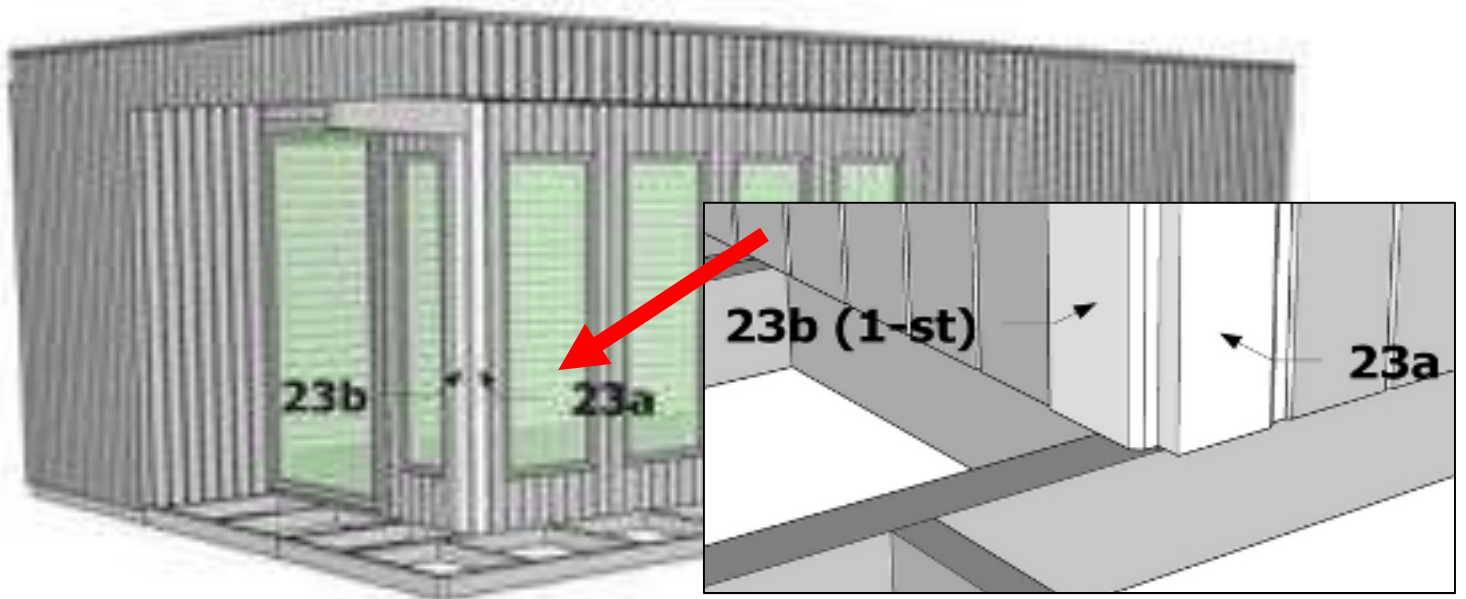

+ **23a** + **23b**

16	3,5 x 40
----	----------

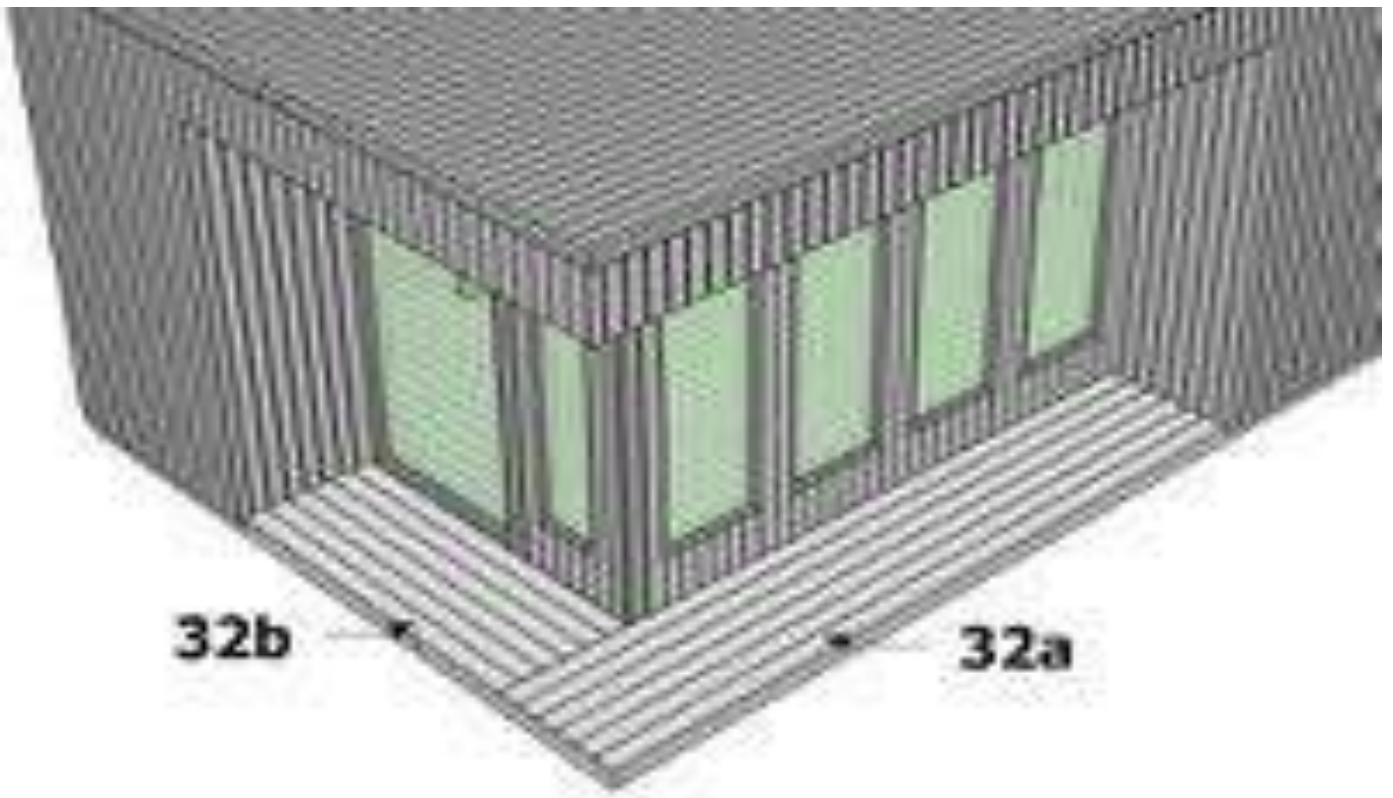


+ **32a** + **32b**

132	3,5 x 40
-----	----------

OFFICE 21 insulated Assembly instruction

25/28

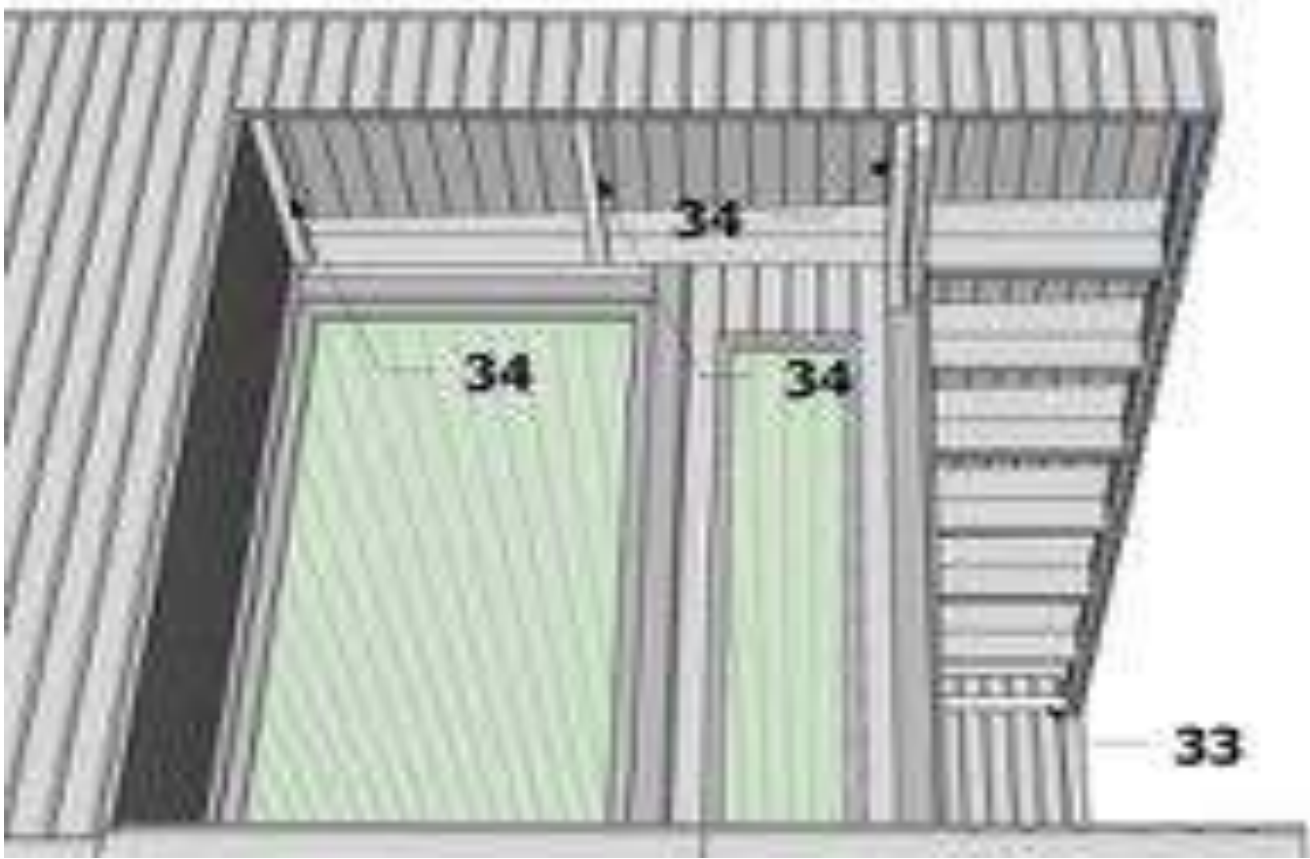

+ **33** + **34**

8	4,5 x 80
---	----------




+ **35a** + **35b**

132	3,5 x 40
-----	----------


OFFICE 21 insulated Assembly instruction



+ **76** + **77** + **78**

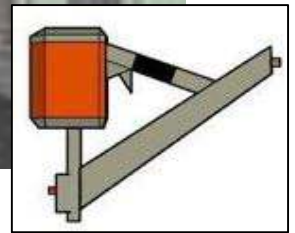


+ **81** + **78** + **82** + **81**
+ **79** + **79** + **80**


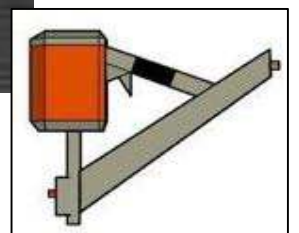


OFFICE 21 insulated Assembly instruction


27/28

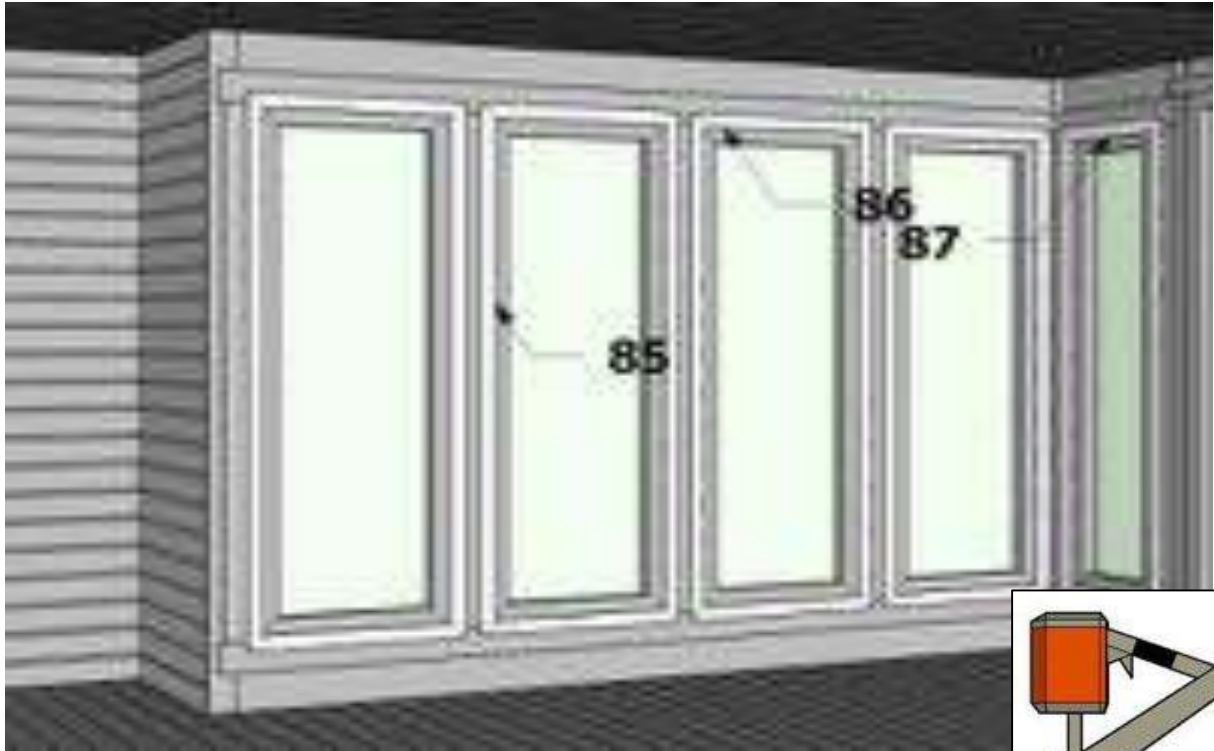

+ **85** + **86** + **87**

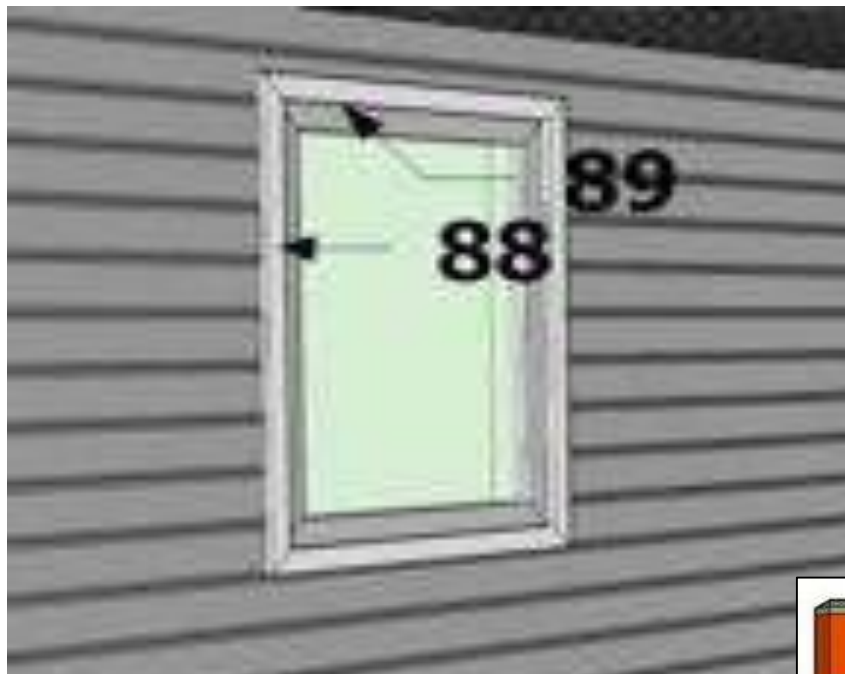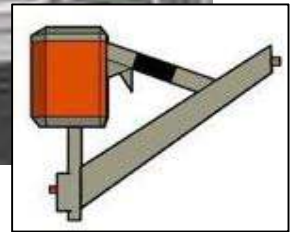


+ **86** + **87**


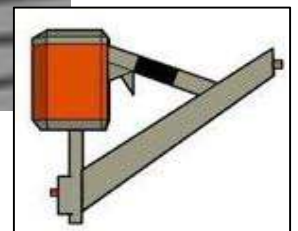


OFFICE 21 insulated Assembly instruction

28/28

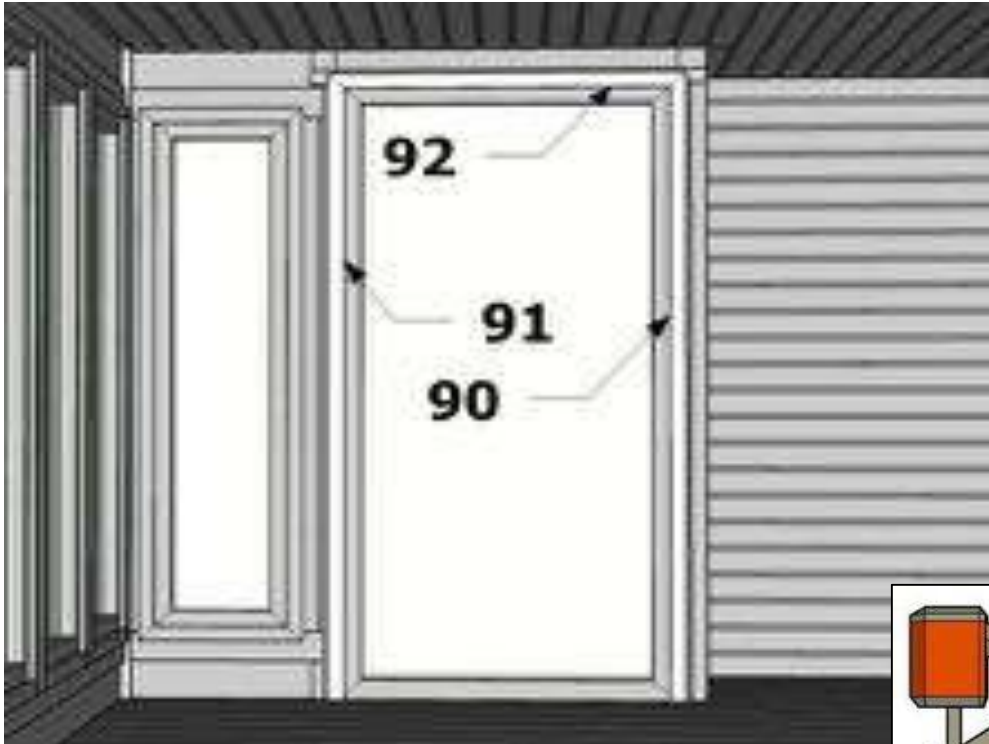

+ **90** + **91** + **92**

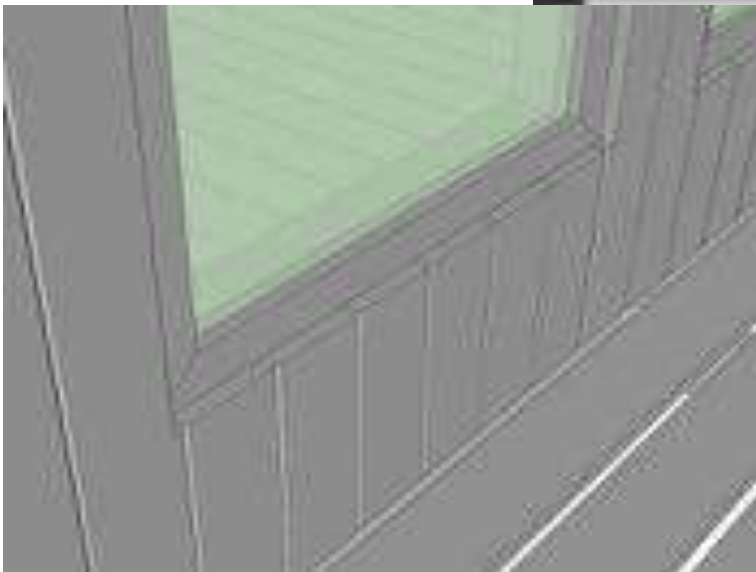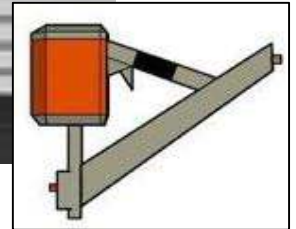

Use moldings pos. 83 and 84 there,
where You think need to be

+ **83** + **84**

