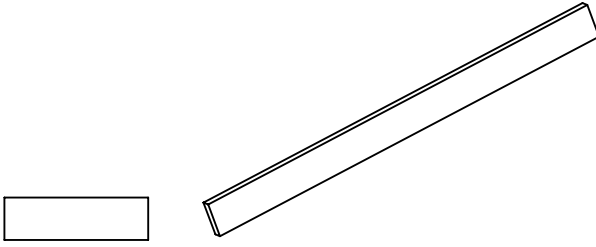
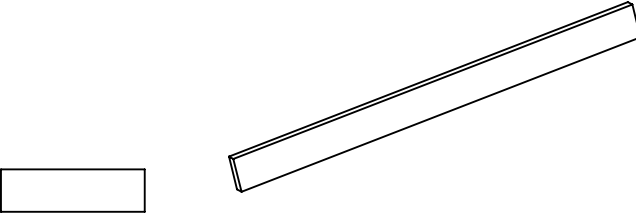
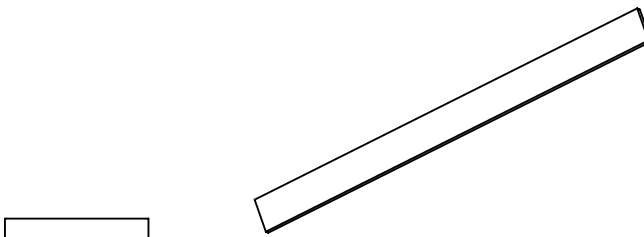
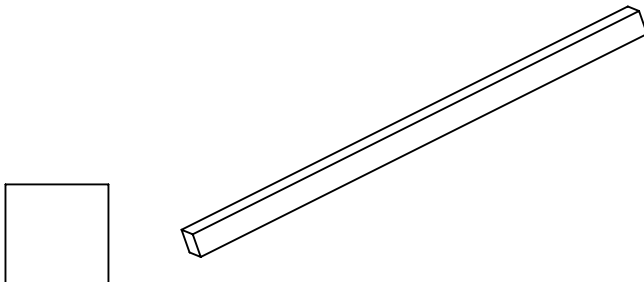
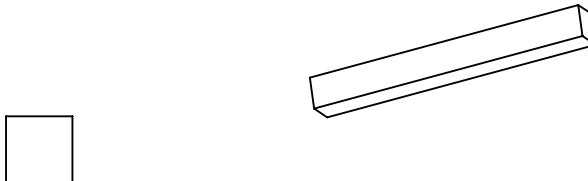
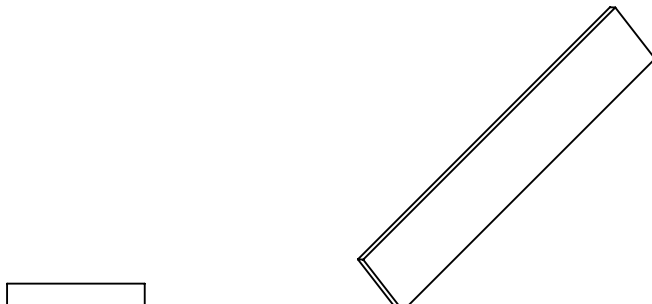
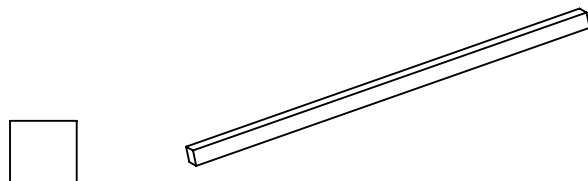
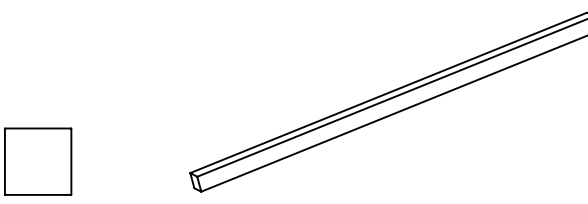
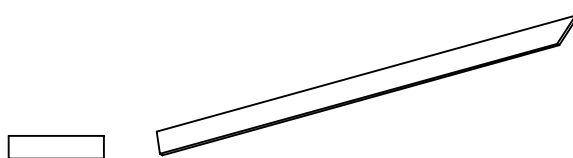
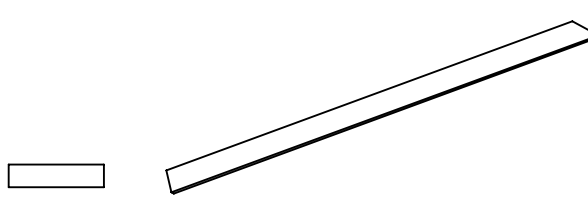
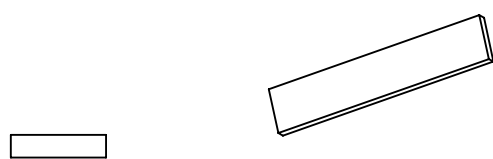
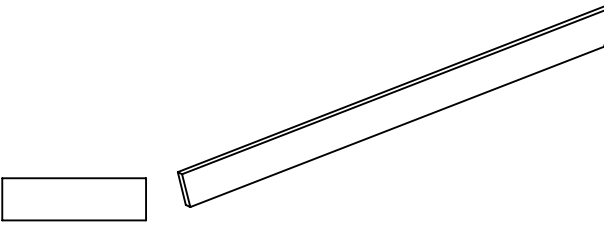
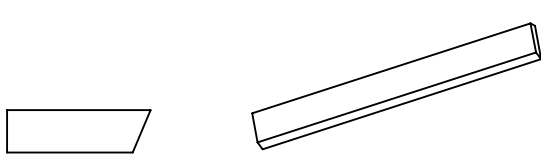



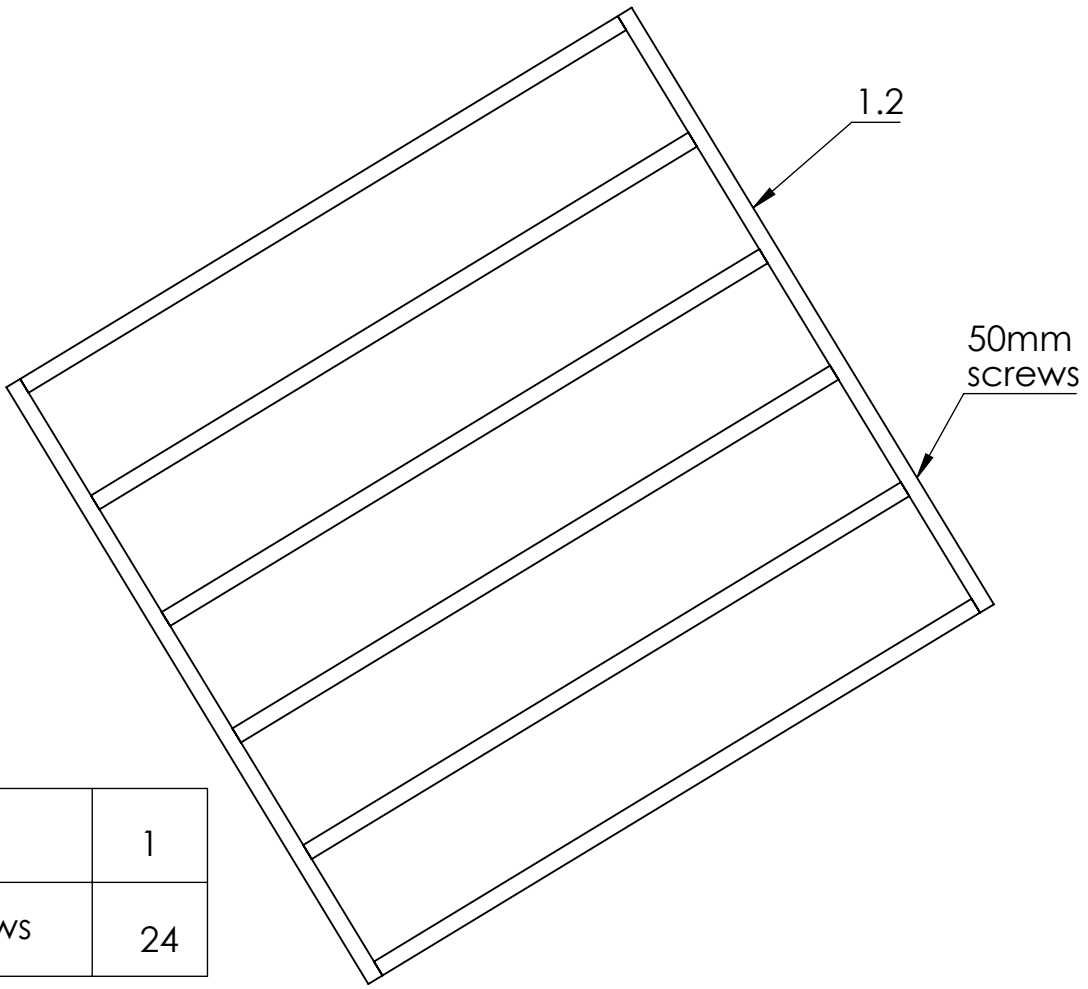
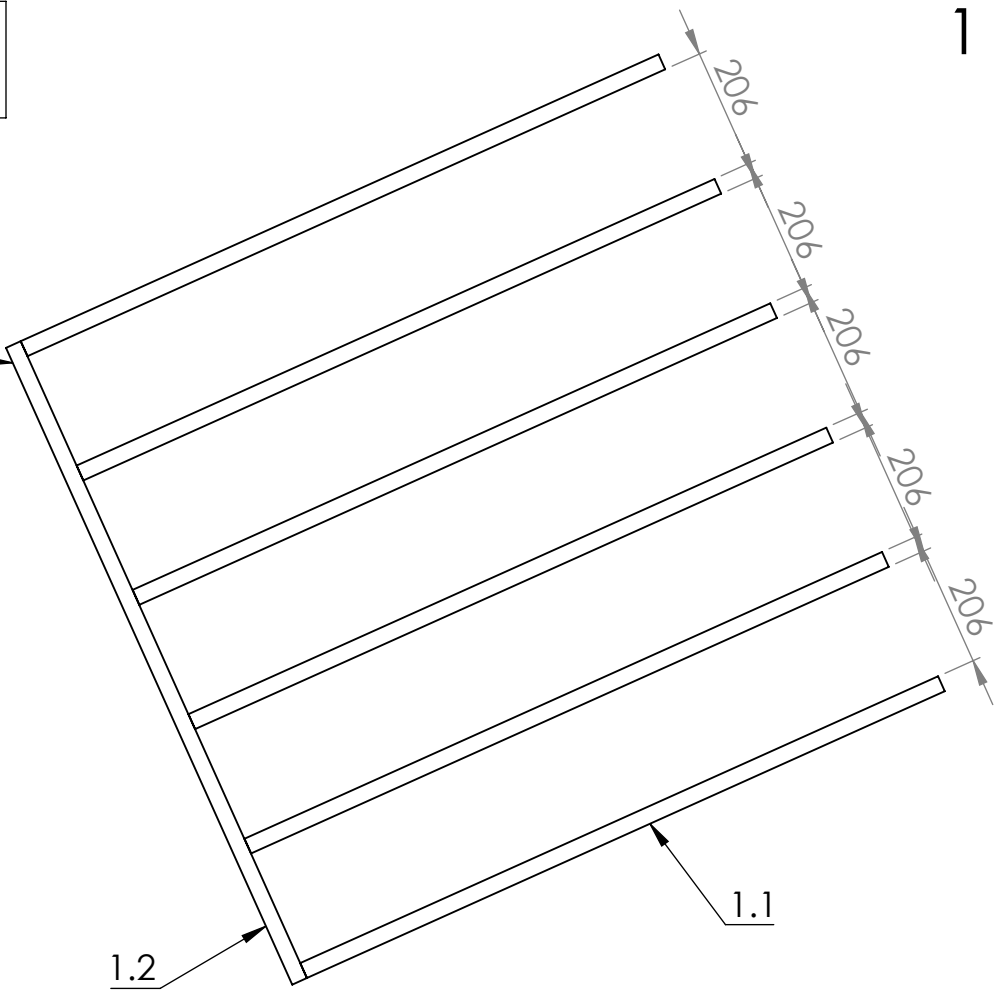
1.1		28*95*1202	6
1.2		28*95*1200	2
1.3		15*95*1200	13
2		68*68*1400	2
3		44*44**390	3
4		44*44*500	21

5		44*44*1170	1
6		44*44*1200	1
7		15*63*1219	1
8		15*63*1276	1
9		15*63*313	1
10.1		28*95*1300	2
10.2		28*95*812	6
11		44*44*225	7


NB! drill the pilot holes for the screws

50mm screws

1.1	6
1.2	1
50mm screws	24




1.2	1
50mm screws	24

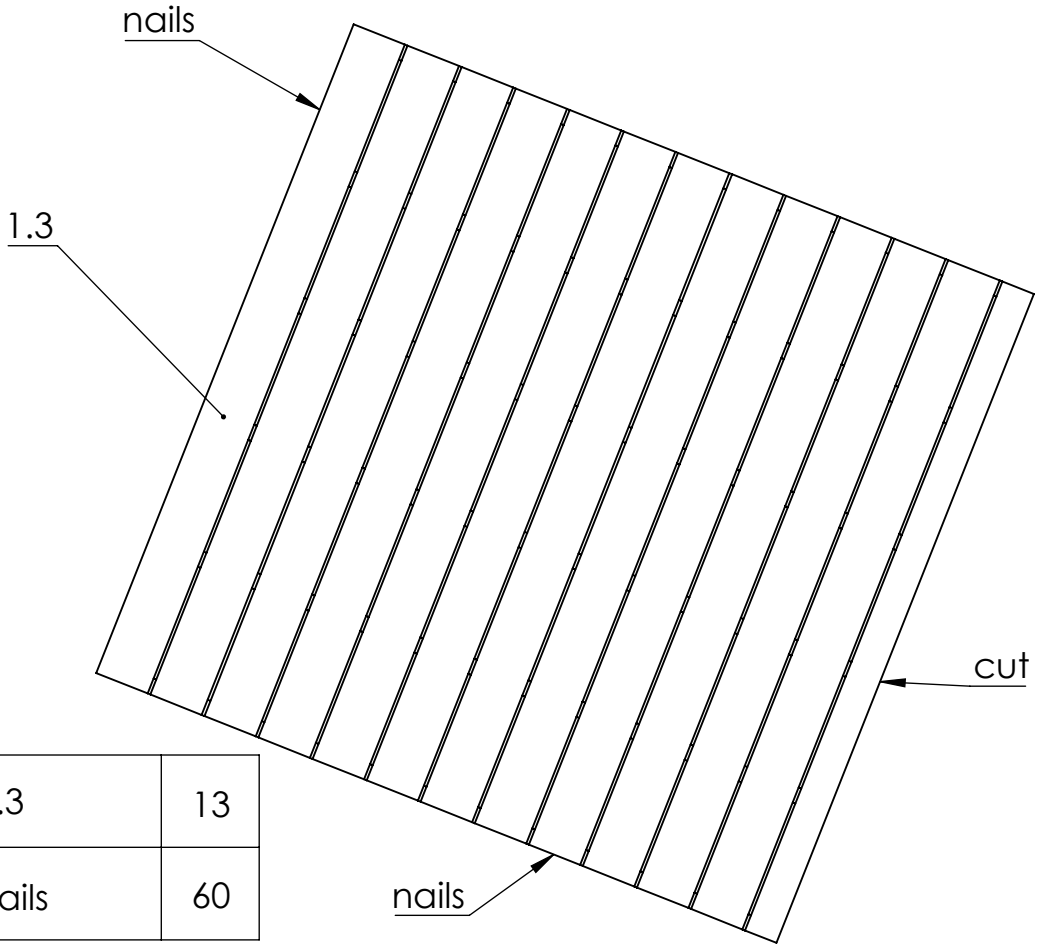


1.3	13
nails	60

NB! drill the pilot holes for the screws

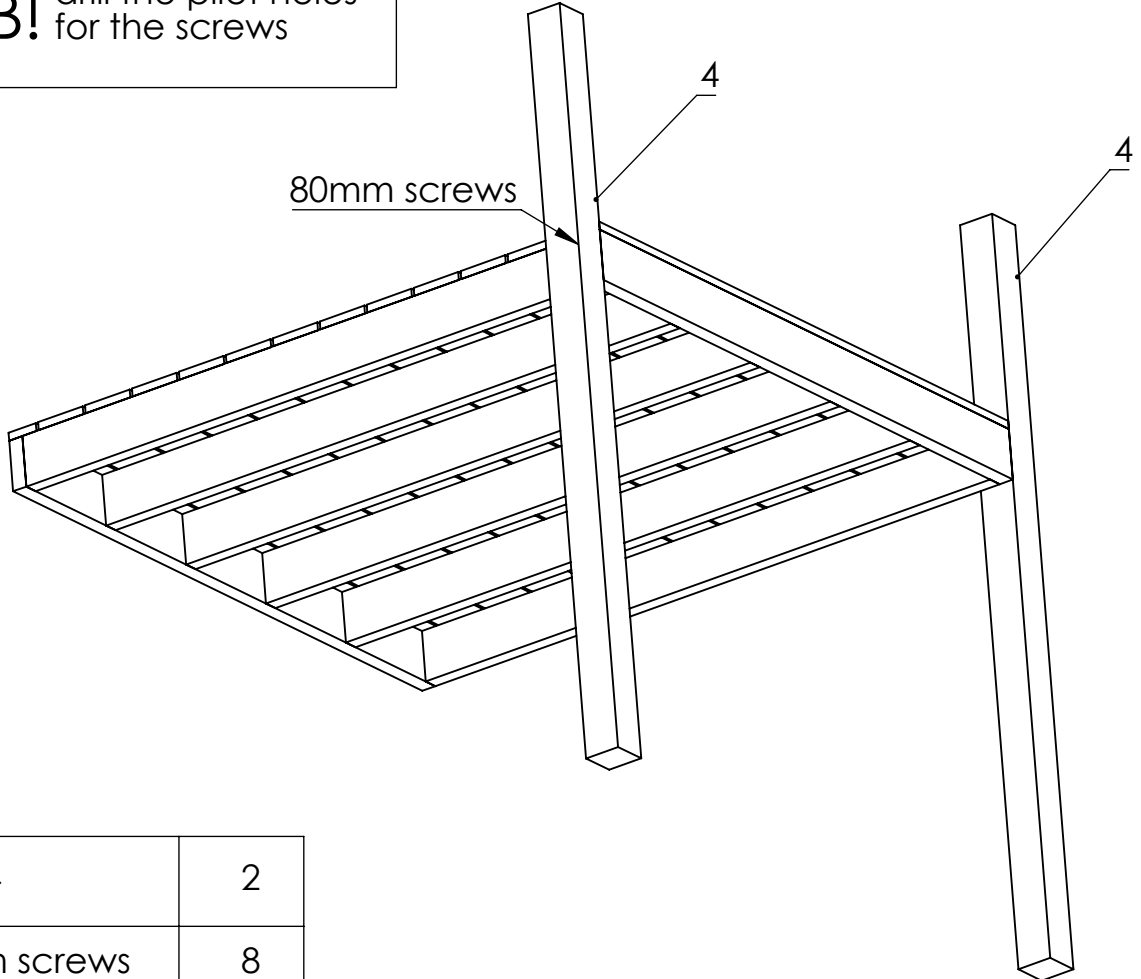


4	2
80mm screws	8


NB! dreill the pilot holis for the screws

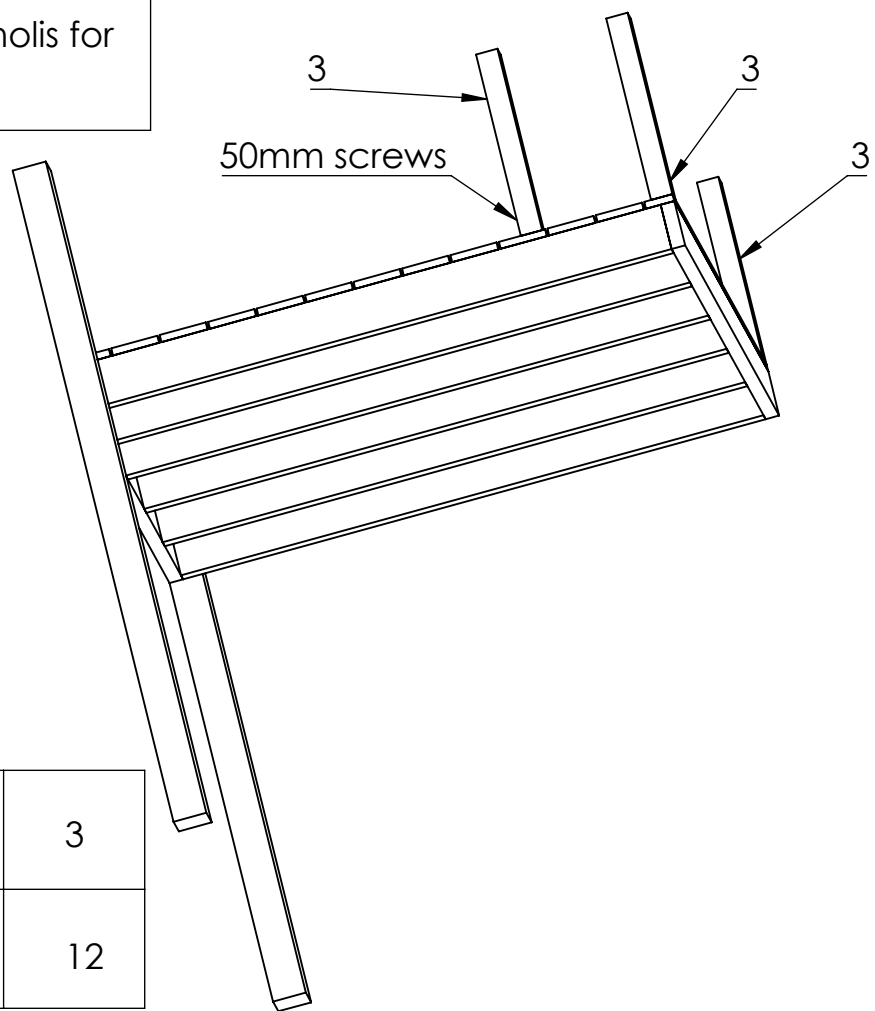


5	3
50mm screws	12

5	1
6	1
11	1
60mm screws	20

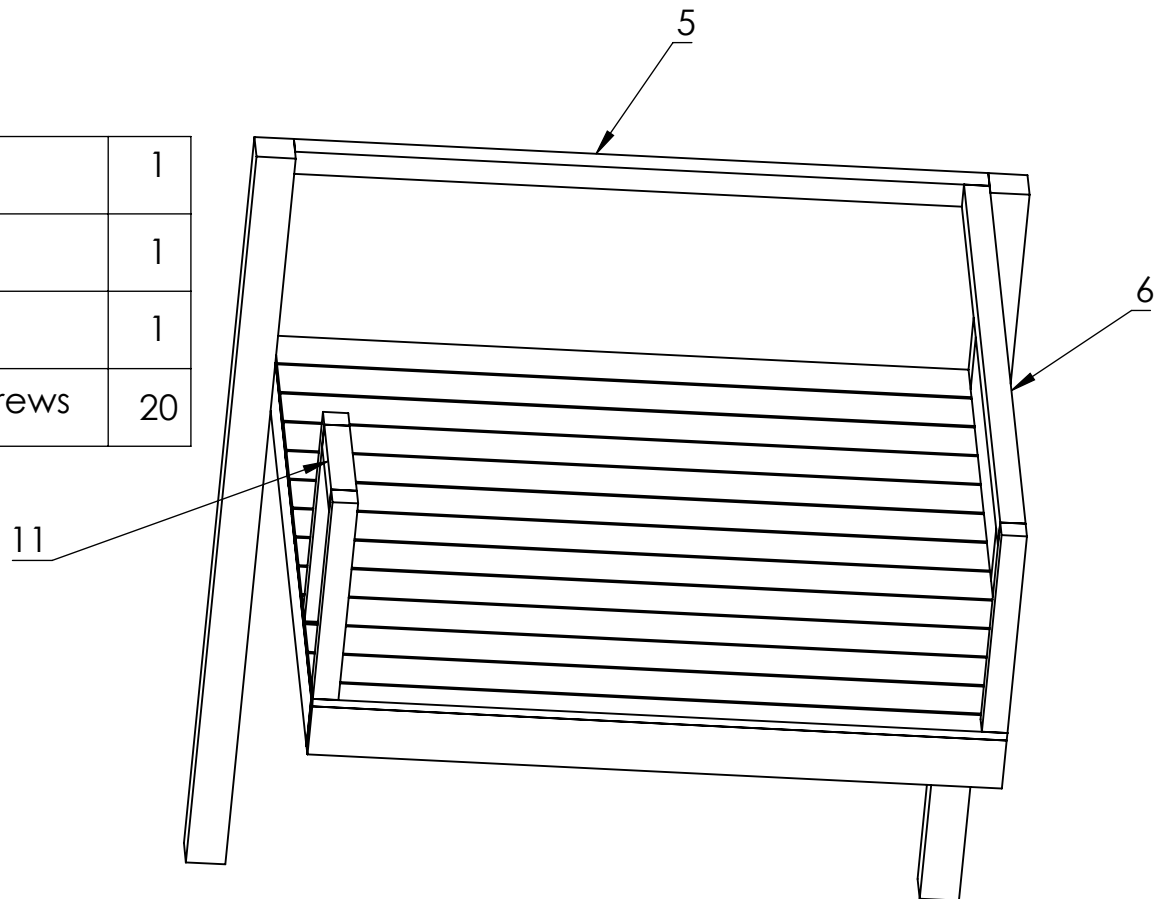

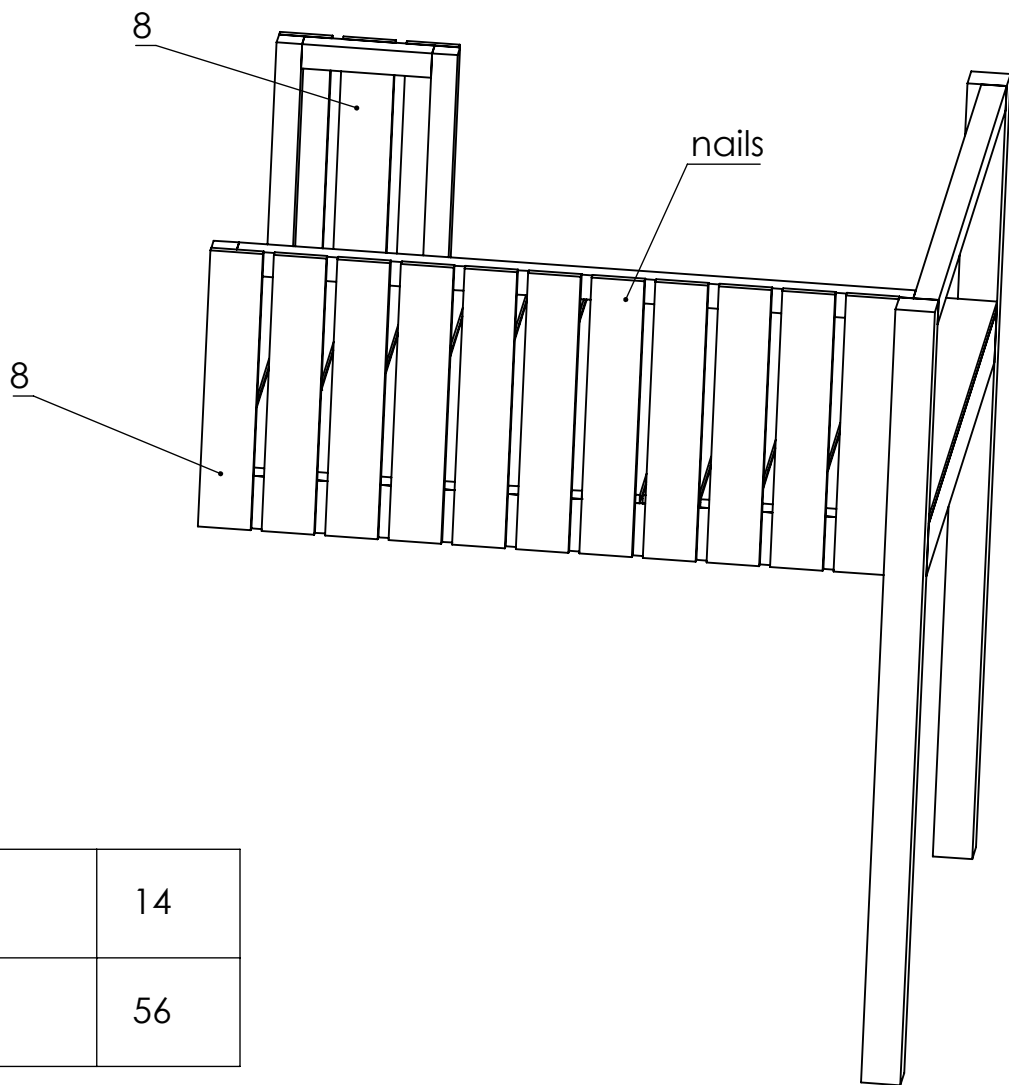


8	14
nails	56

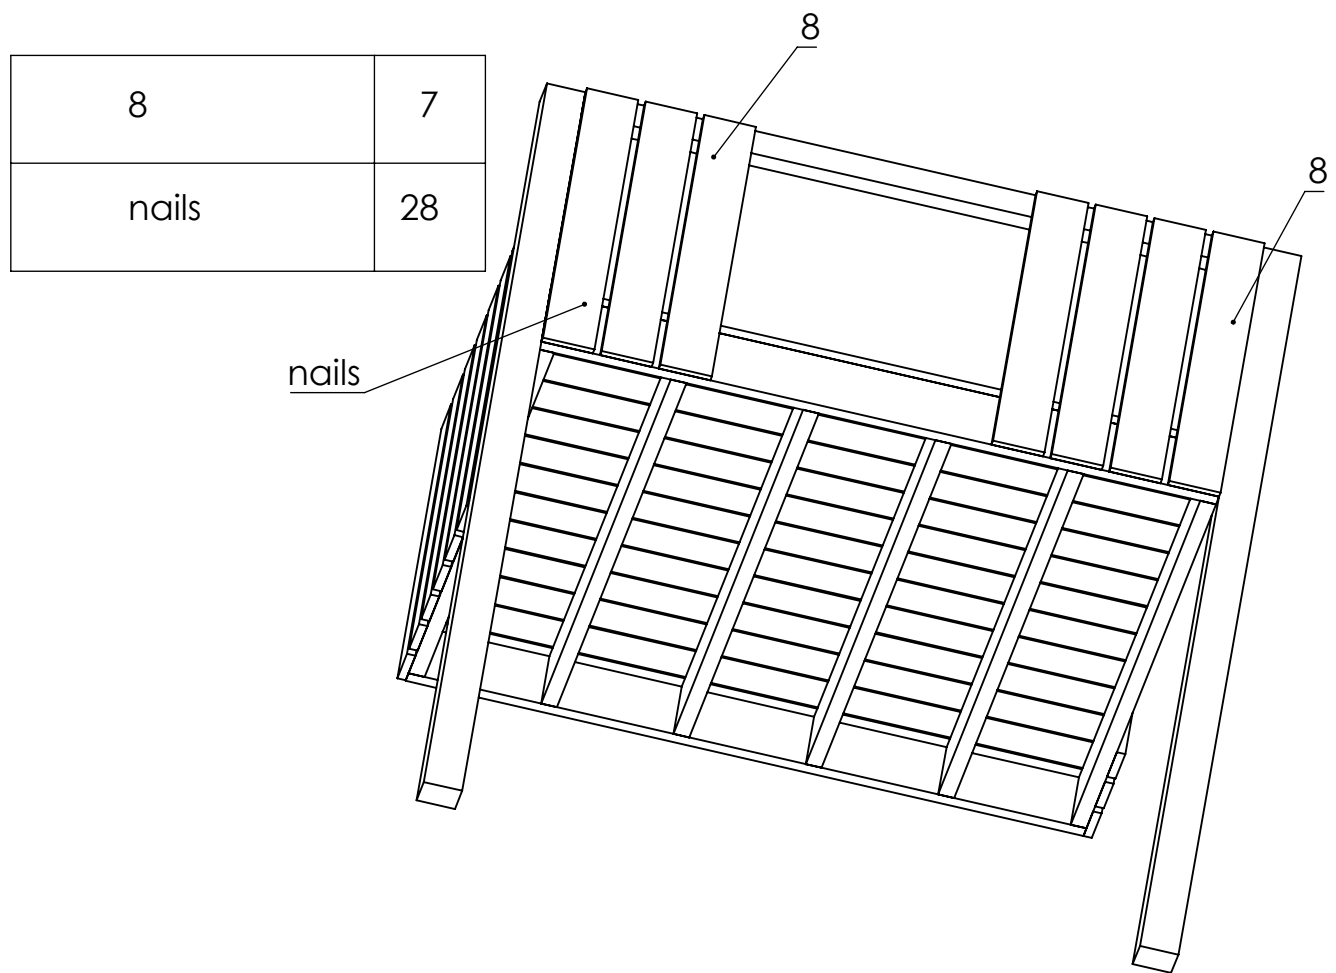

8	7
nails	28

NB! drill the pilot holes for the screws

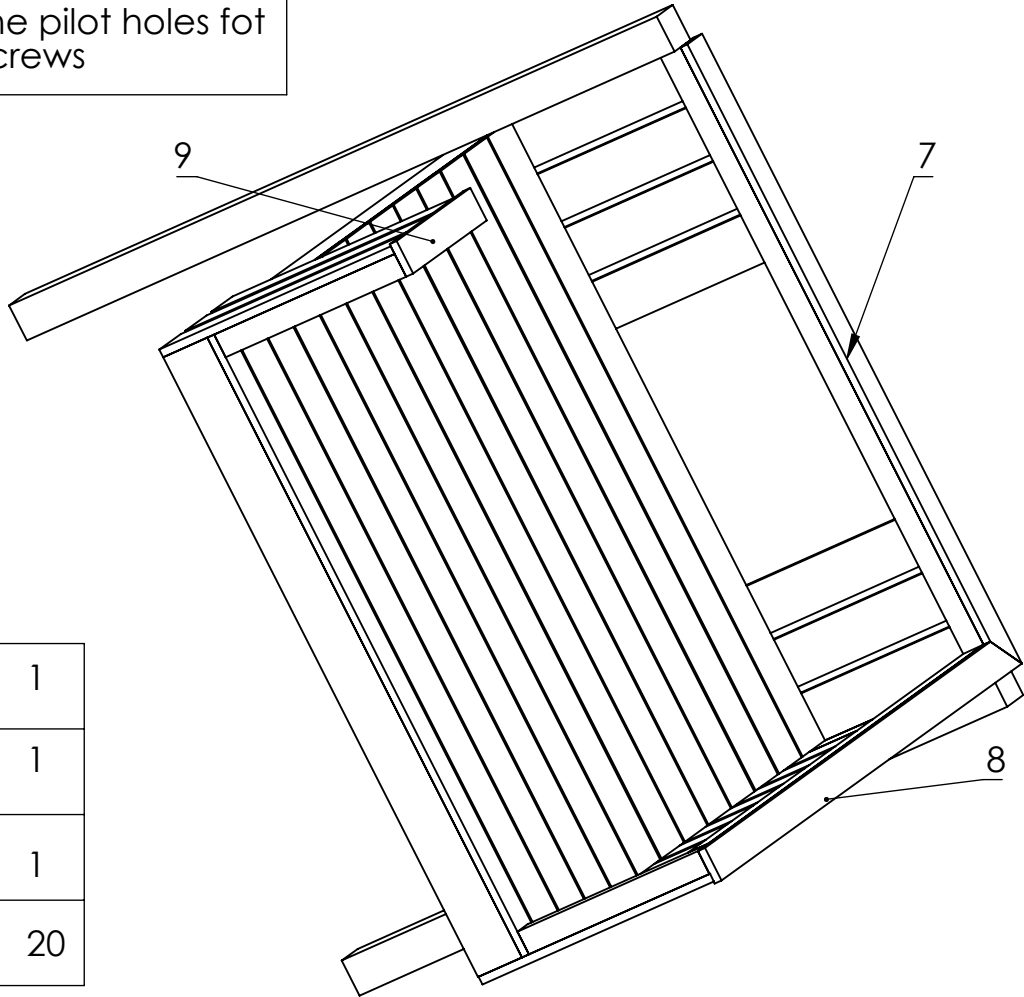

7	1
8	1
9	1
25mm screws	20

10.1	2
10.2	6
50mm screws	28

