


DACHPROTECT^{EPDM}

EPDM ROOF WATERPROOFING

Garden sheds & carports (flat/pent roof)




1

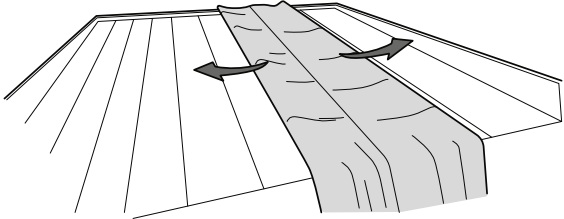


Bring the EPDM membrane on the roof and spread it out. Can also be used as a temporary roof seal in advance.

2

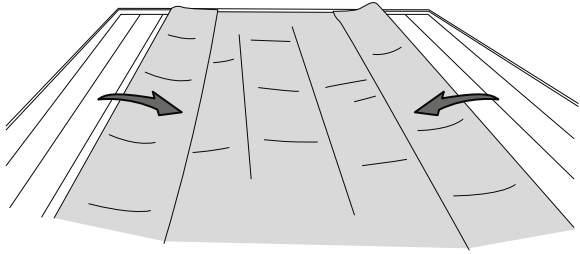


Fold over the edge areas approx. 40cm at the side.

3

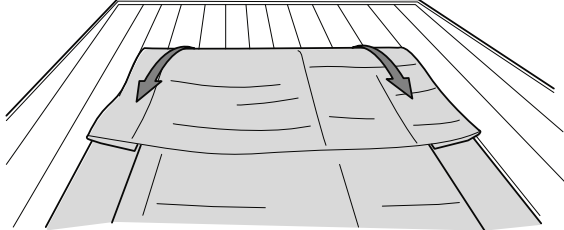


Fold back half of the EPDM membrane.

4

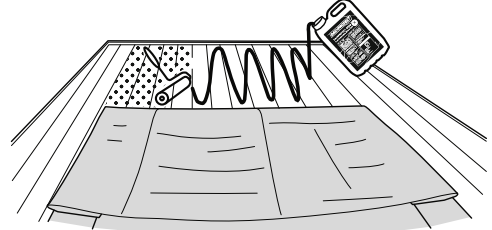


Tip out Bluetek surface adhesive in loops only on the wood substrate and distribute evenly with the roll.

5

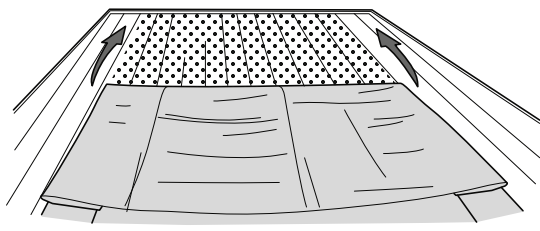


Work the EPDM membrane back into the still wet adhesive surface as wrinkle-free as possible from the center. (There is no airing time!)

6

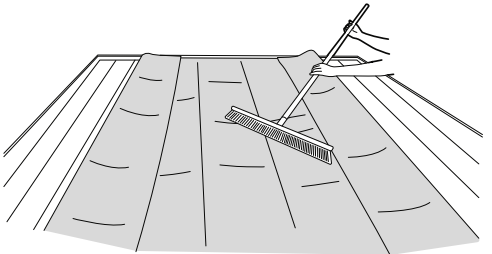


Press the EPDM membrane with a broom or with the flat hand as bubble-free as possible.

7

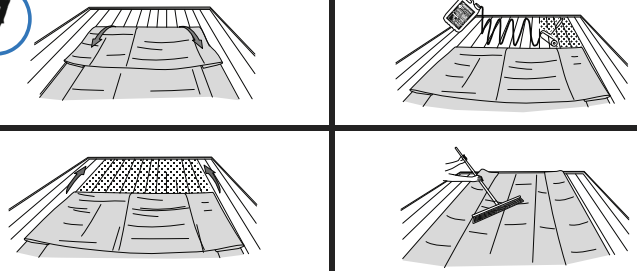


2nd Roof half: Repeat steps 3 - 6.

8

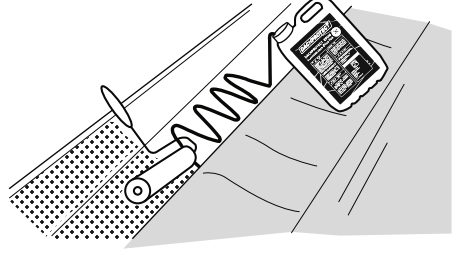


Tip the Bluetek surface adhesive in loops only on the wood substrate and distribute with the roll on edge areas including panel.

9

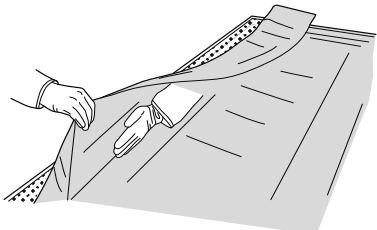

Work the edge areas with a flat hand from the inside to the outside down to the valley and then work up to the top edge on the panel.

10

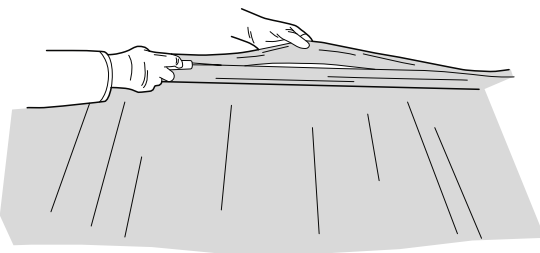

Shorten the projecting EPDM membrane according to the panel (knife or scissors).